

Heat-Activated Window Opener

(AM401)

The following instructions were provided by the manufacturer.

Please note that the charged cylinder in these products is guaranteed to work only in temperatures ranging from -35°C to 110°C (-31°F to 230°F). In very cold regions, the opener should be removed and stored indoors.

If the seals do freeze, bring the unit indoors and allow it to return to room temperature slowly. Moving the piston or the adjustment screw while the seals are frozen may cause permanent damage.
