


# Automatic Needle Threader

---

(45K27.05)


*The following instructions were provided by the manufacturer.*

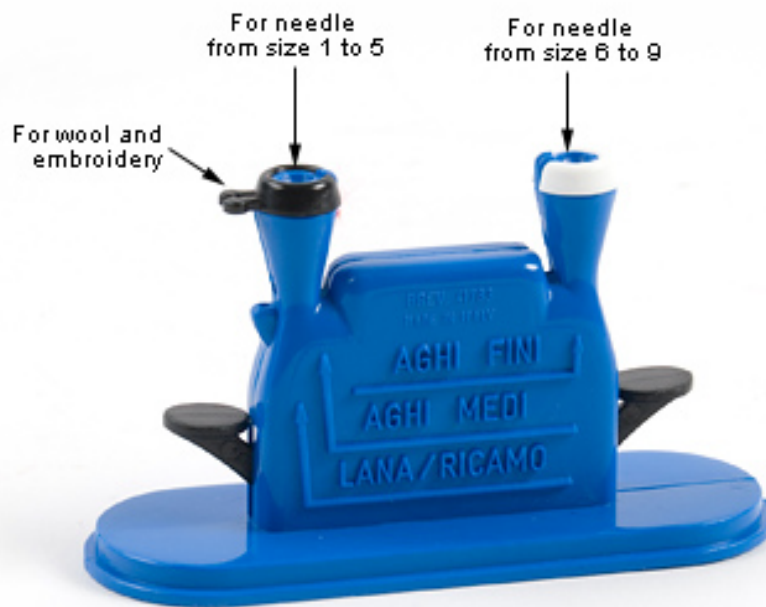


Put needle (eye down) into appropriate funnel.  
Drop the thread over the slot next to the funnel.



Press button. Thread is pushed through the eye of the needle and it comes out the other side of the funnel.

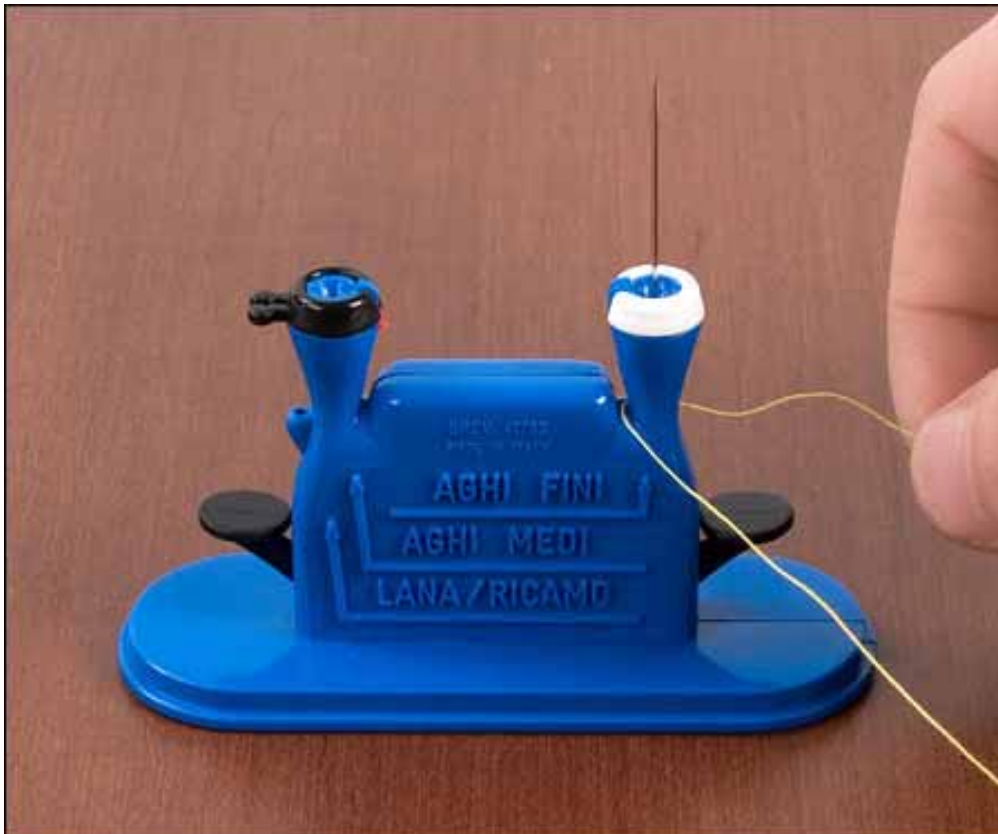

Pull short end of string completely through funnel.

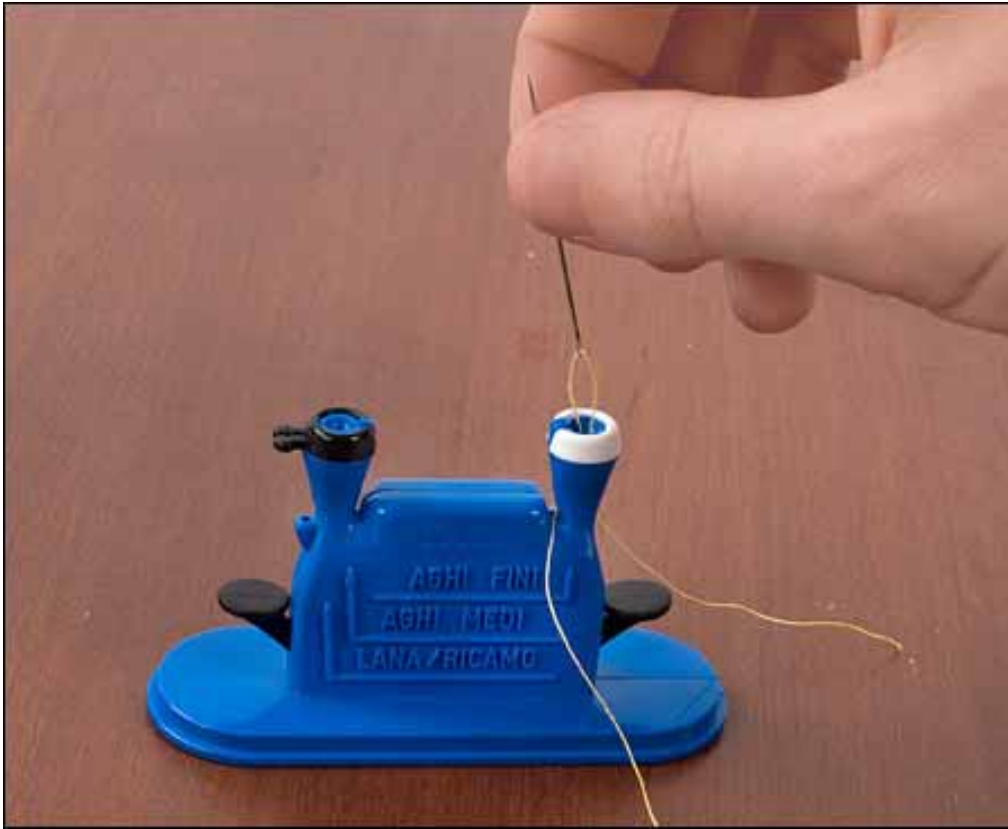

Lift needle and thread. Pull thread through tiny opening in side of funnel to release it from the threader.