 




Chime Movements

Clock Assembly
(Hands and dial
not included.)

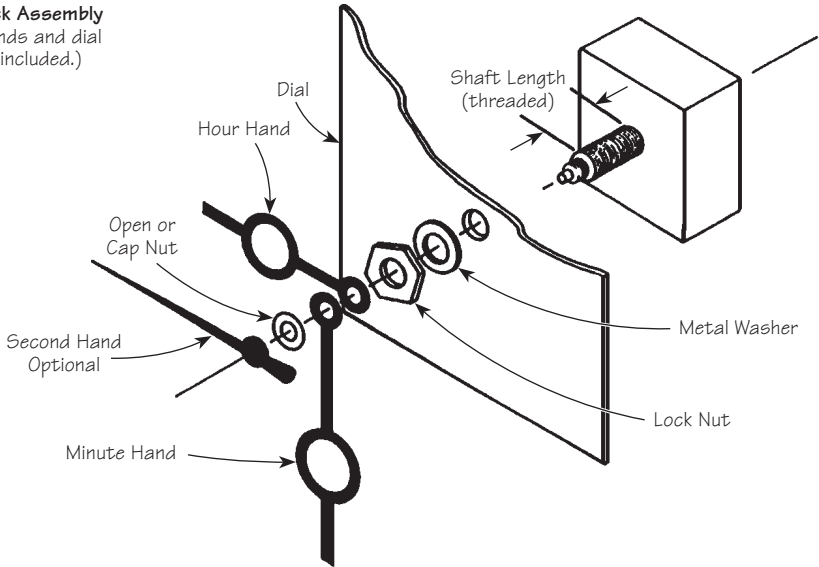

Setting the Chime

  1. Install a C-size battery (not included).
2. Slide the set switch to the left-most position.
3. Rotate the hand set knob clockwise until the melody plays.
4. After the melody has played, hold down the hand set knob to prevent it from moving, then rotate the hour and minute hands to the position indicated by the strike (i.e., if the clock strikes seven times, move hands to the seven o'clock position). This step will synchronize the hands with the chime.
5. Next, set clock to the present time of day by turning the hand set knob.
6. If you would like your chime to automatically shut off at night (between 11:00 p.m. and 5:45 a.m.), slide set switch to a.m. or p.m. position, according to the present time of day (i.e., if you are setting the clock at ten o'clock in the morning, you would slide the switch to the a.m. position. If you are setting the clock at two o'clock in the afternoon, you would slide the switch to the p.m. position). Repeat steps 3 to 5.

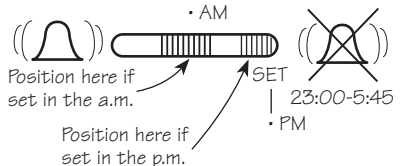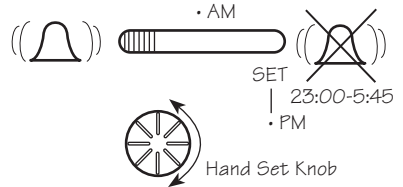

7. Chime Selector



8. Volume Control Switch



9. Although the speaker comes mounted on the movement case, it can be mounted in another location to suit the design of your clock case. Remove the two screws holding the speaker bracket in place and re-attach it in the location of your choice.

Note: *The hourly strike function will work immediately; however, the 1/4 hour chime will not play until anywhere from 4 to 24 hours after the movement has been set. The movement is preset at the factory and will synchronize itself.*