


DRAWING NOTES:


1.
- THIS DRAWING PROVIDES DETAILS FOR INSTALLATION OF SEATS IN THE MAIN PASSENGER CABIN OF A BOEING 737-800 AIRCRAFT, MSN 30290 AND 33024. ONLY THE ITEMS SPECIFICALLY CALLED OUT HERE ARE INTRODUCED BY THIS MODIFICATION, ALL OTHERS ARE EXISTING AND APPROVED UNDER THE PREVIOUS INTERIOR CONFIGURATION.
2.
- ALL SEATS SHOULD BE INSTALLED IN ACCORDANCE WITH STA NUMBERS. LOCATIONS SHALL BE MEASURED FROM THE FACTORY SEAT TRACK SPLICES INDICATED ON THE DRAWING AT STA 480.
3.
- ALL SEAT LOCATIONS ARE TO CENTER LINE OF INBD FWD LEG STUD IN LOCKED POSITION WITH  $\pm \frac{3}{16}$  TOLERANCE. LOCATIONS ARE SPECIFIED BY THE FUSELAGE STATION LOCATING THE FORWARD LEG SEAT TRACK ATTACH STUDS FOR ALL SEATS.
4.
- ALL SEATS MUST BE PLACARDED FOR FLAMMABILITY PER FAR 25.853(c) AND SEAT BELTS MUST BE PLACARDED WITH TSO/ETSO WITH BUCKLE INSTALLED ON SIDE AWAY FROM AISLE.
5.
- THE MAIN AISLE WIDTH MUST NOT BE LESS THAN 15 BELOW 25 HEIGHT OR 20 ABOVE 25 HEIGHT IN ACCORDANCE WITH FAR 25.815.
6.
- ENCIRCLED ITEMS ON THE DRAWING SHEETS CORRELATE TO ITEM NUMBERS ON THE PARTS LIST.
7.
- INSTALL ONE LIFE VEST IN EACH DOUBLE SEAT IN BUSINESS CLASS. LOCATE LIFE JACKET IN COMPARTMENT ABOVE ARM RESTS.
8.
- INSTALL ONE LIFE VEST UNDER EACH SEAT IN ECONOMY CLASS. INSTALL LIFE JACKET PULL CORD AROUND LIFE JACKET POUCH AND PLACE THE LIFE LIFE JACKET IN STOWAGE BOX BELOW THE SEAT CUSHION. ENSURE THE "PULL FOR LIFEVEST" LANYARD EXITS THE TOP OF THE LIFE VEST BOX COVER AND IS HANGING OUTSIDE AND IN FRONT OF THE LIFE JACKET BOX COVER.

REVISION	DESCRIPTION	APPROVED	DATE
IR	INITIAL RELEASE	----	----

REV	IR	IR	IR	IR	IR	IR	IR	IR	—	—	—	—	—	—	—	—
PAGE	1	2	3	4	5	6	7	7	—	—	—	—	—	—	—	—


THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF GLOBAL AEROSPACE DESIGN CORPORATION (GLOBAL) AND IT SHALL NOT BE DUPLICATED USED OR DISCLOSED, IN WHOLE OR IN PART FOR ANY PURPOSE, WITHOUT THE PRIOR WRITTEN CONSENT OF GLOBAL. NO LICENSE, EXPRESS OR IMPLIED, TO ANY INTELLECTUAL PROPERTY IS GRANTED BY THIS DOCUMENT.			UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE INCHES TOLERANCES ARE: ANGLES +/- 2° 1 PLACE DECIMALS +/- .1 2 PLACE DECIMALS +/- .03 3 PLACE DECIMALS +/- .010			 <div>Global AEROSPACE DESIGN CORP.</div>			100 TECHNE CENTER DRIVE, SUITE 201 MILFORD, OH 45150 (+1) 513 444 4049   www.gadc.aero			
NEXT HIGHER ASSEMBLY: GD0054IC			USED ON: B737-800			DRAWING TITLE:  INSTALLATION – SEATS, ANG B737-800						
DRAWN: S. HAWTHORN			DATE: 31-OCT-2013									
CHECKED: R. NYSTROM			DATE: 31-OCT-2013			SIZE: B	DRAWING NUMBER: GD0094ST				REVISION: IR	
APPROVED:			DATE: 1-NOV-2013			SCALE: NONE		CAGE CODE: 6S4Y7		SHEET 1	PAGE 1	



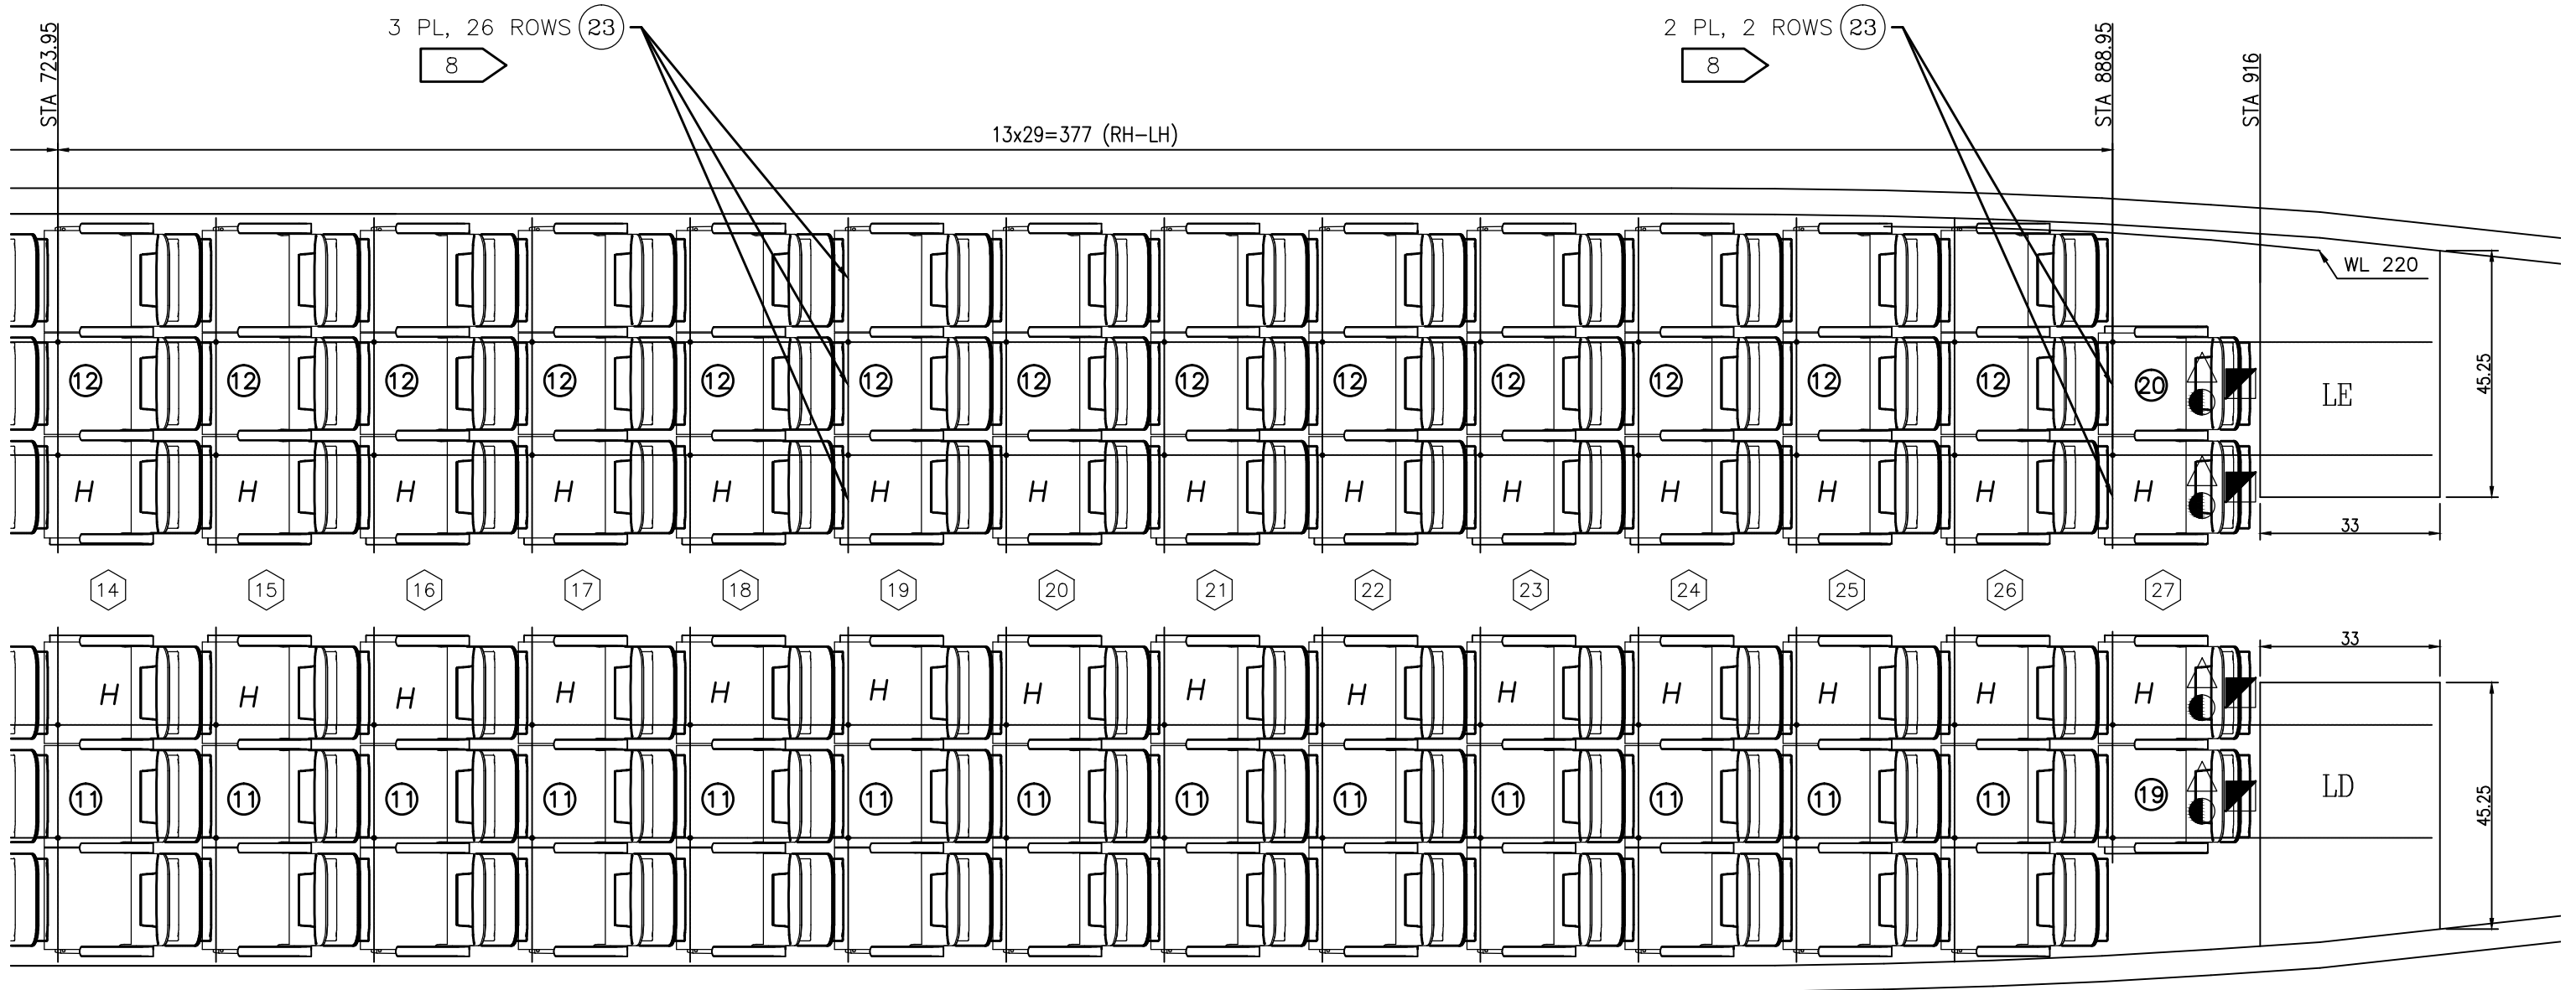


- SYMBOL CODE:
- DENOTES LIMITED RECLINE AT THIS PLACE
  - DENOTES NO REAR VIDEO AT THIS PLACE
  - DENOTES SEAT ROW NO.
  - DENOTES IN ARM VIDEO AT THIS PLACE
  - DENOTES HANDICAPPED SEAT
  - DENOTES NO REAR TABLE AT THIS PLACE
  - DENOTES IAT SEAT




# BUSINESS CLASS AISLE SIDE VIEW

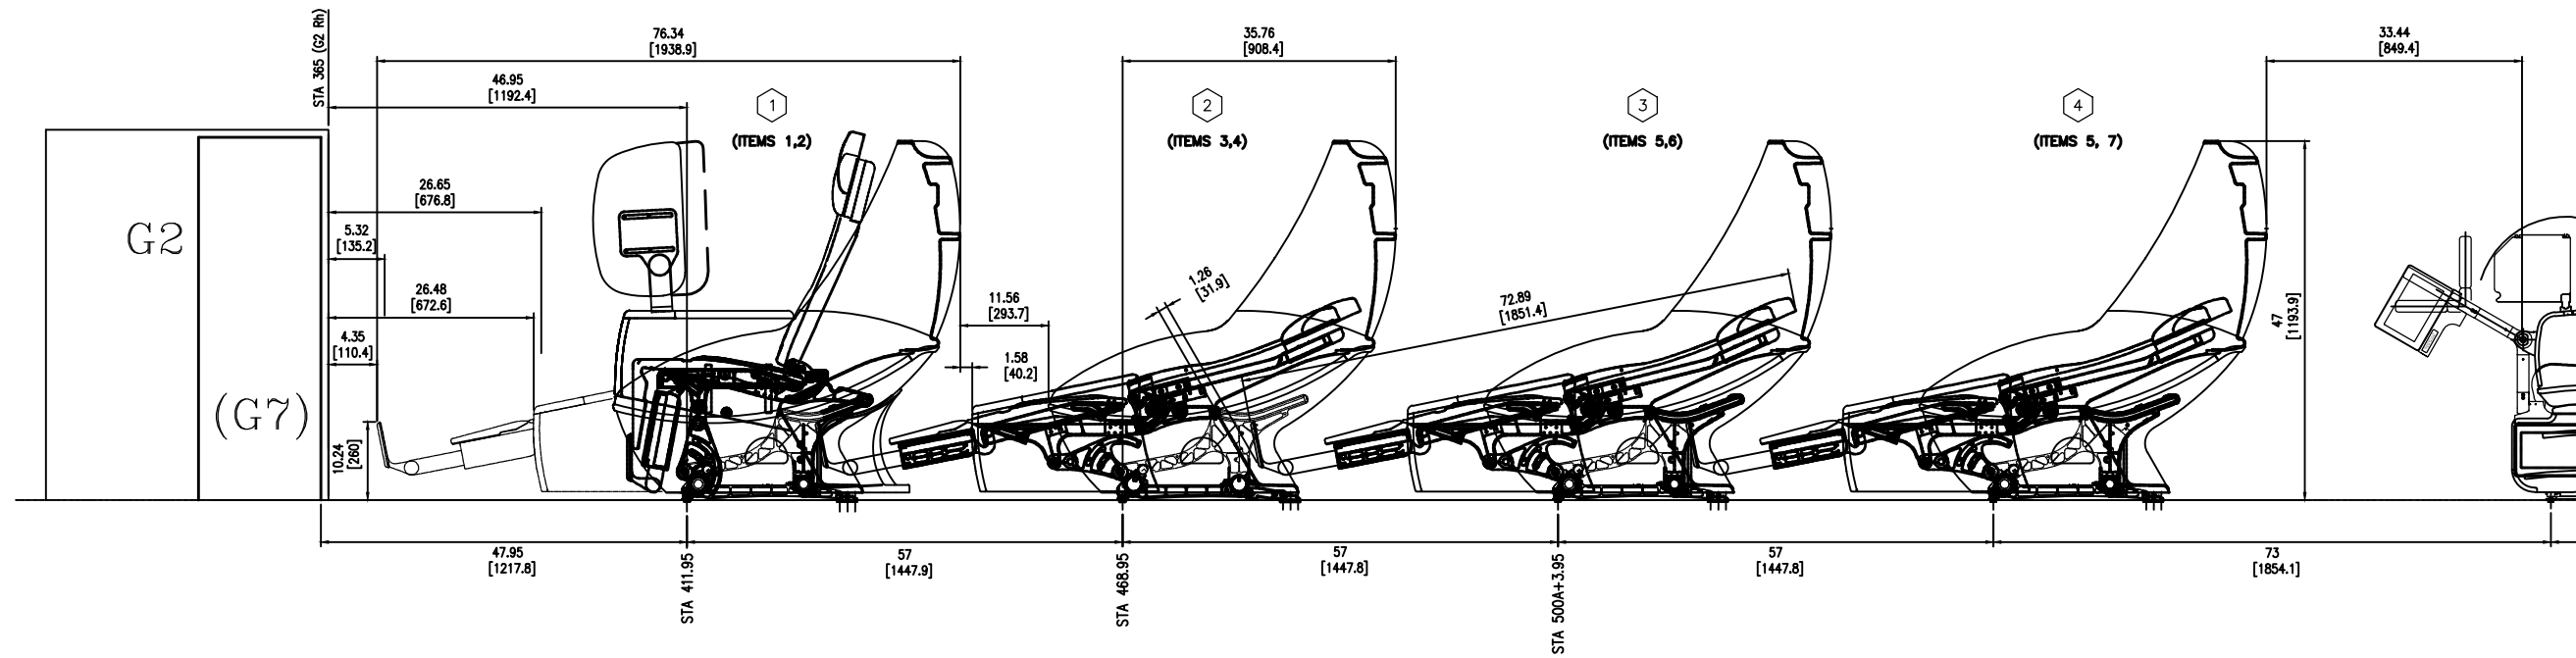

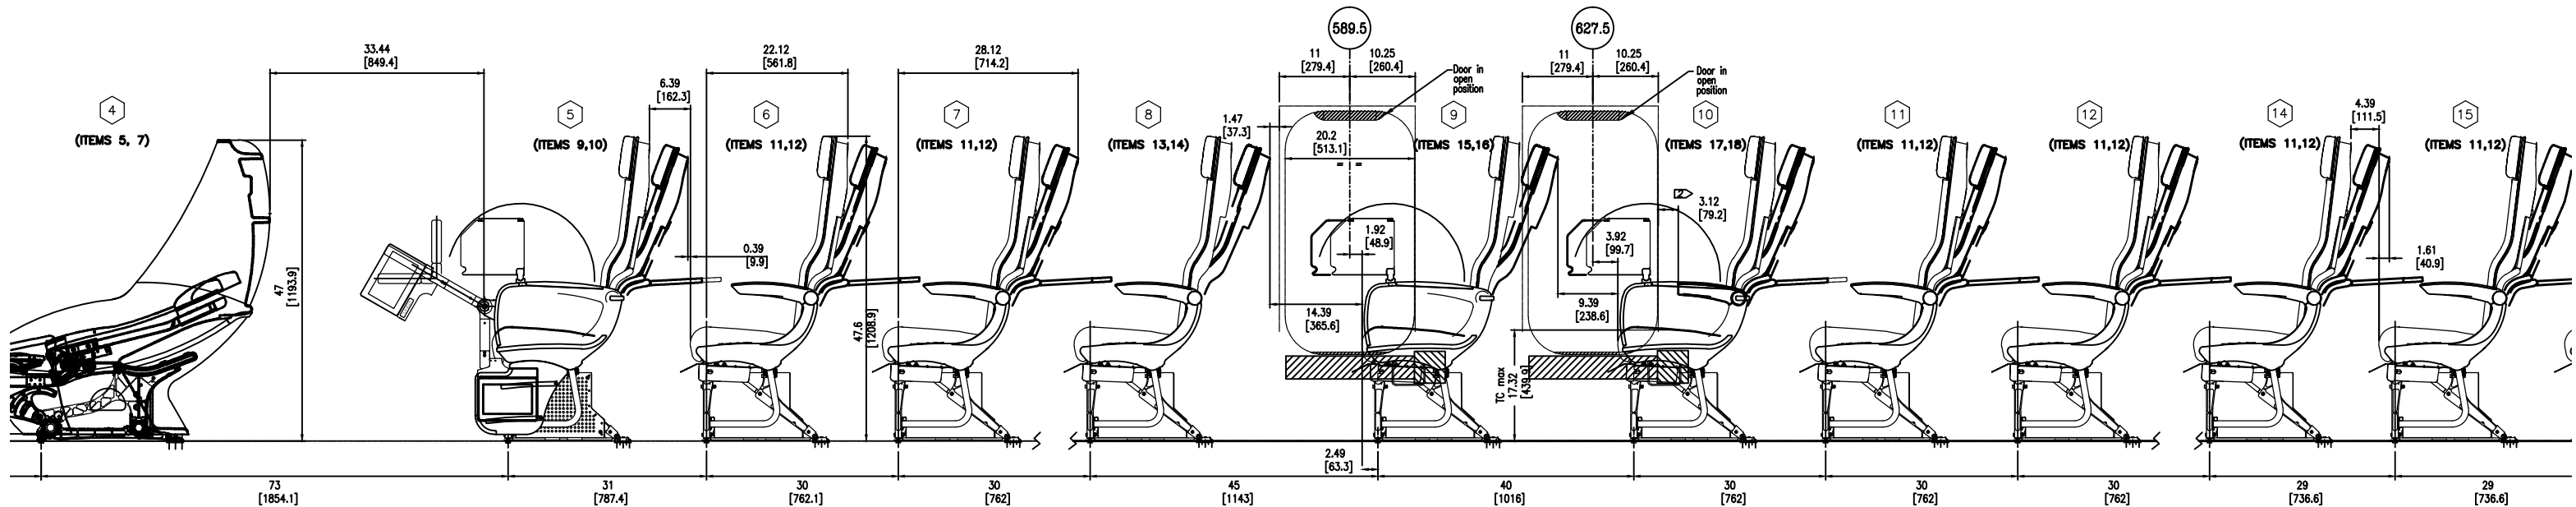


# FORWARD ECONOMY CLASS AISLE SIDE VIEW


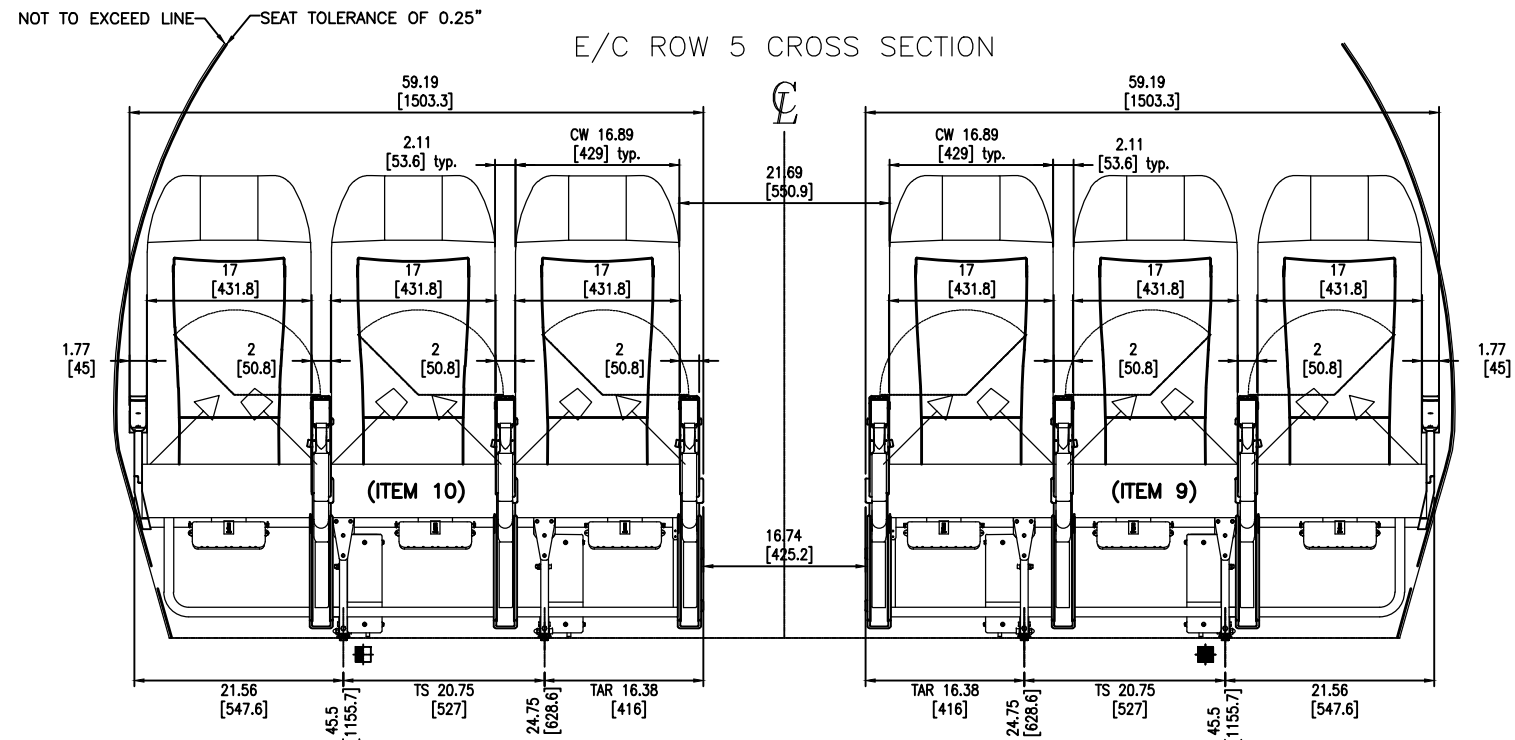
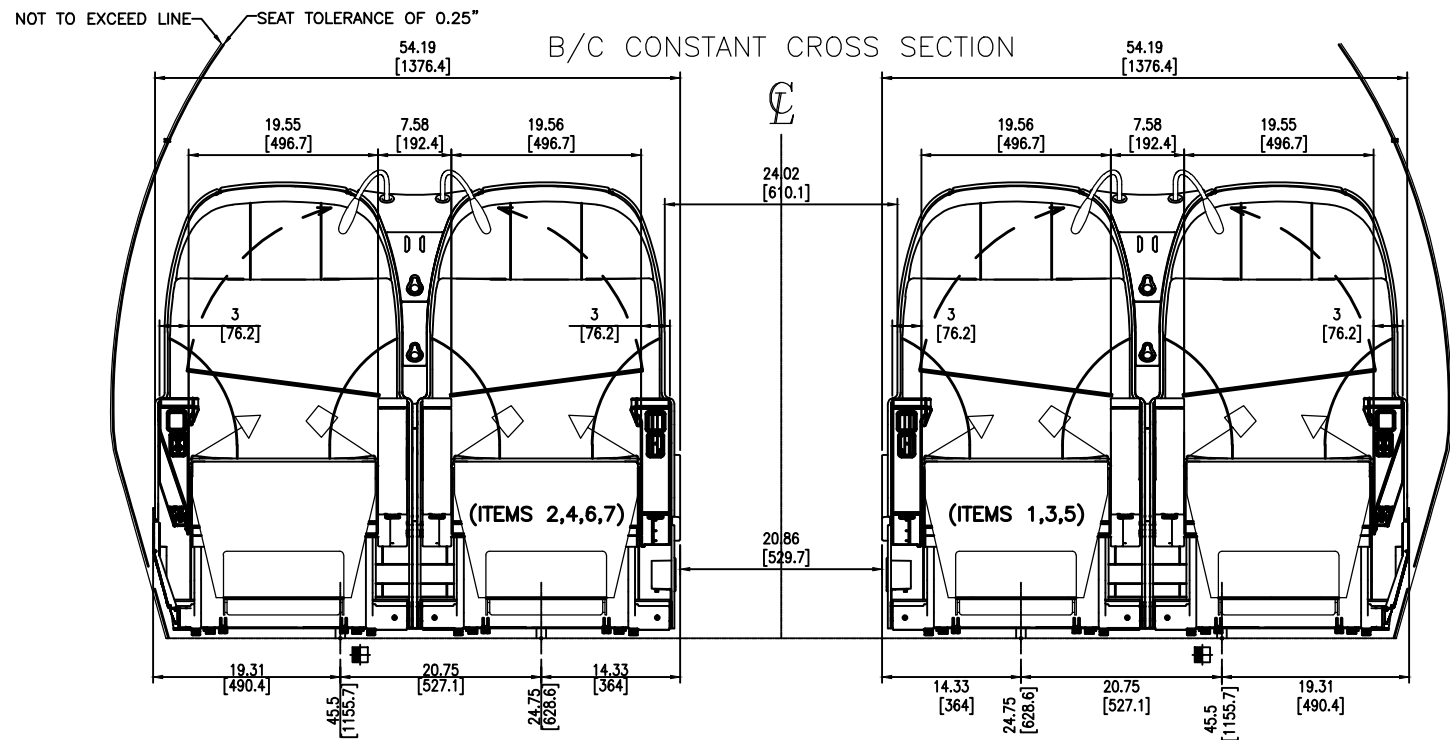
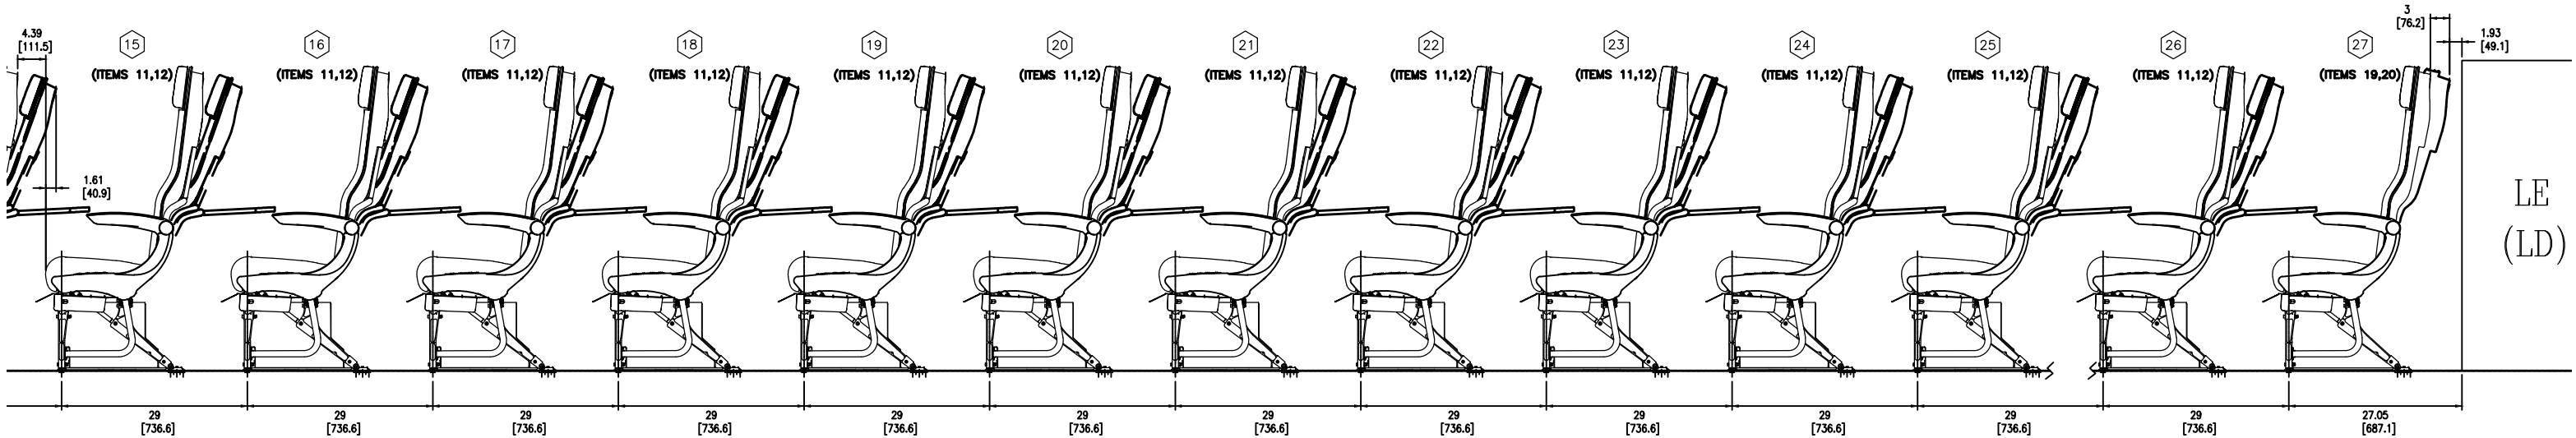


## AFT ECONOMY CLASS AISLE SIDE VIEW






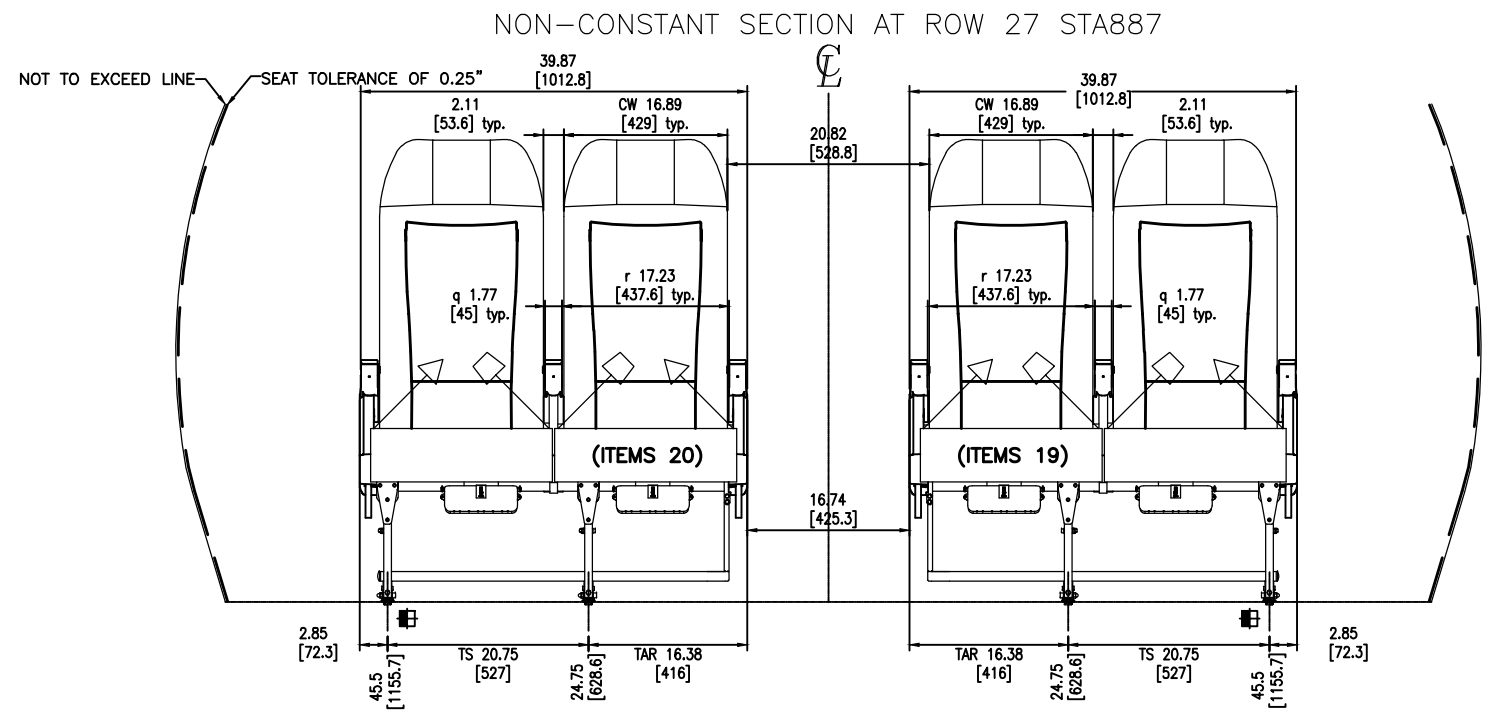
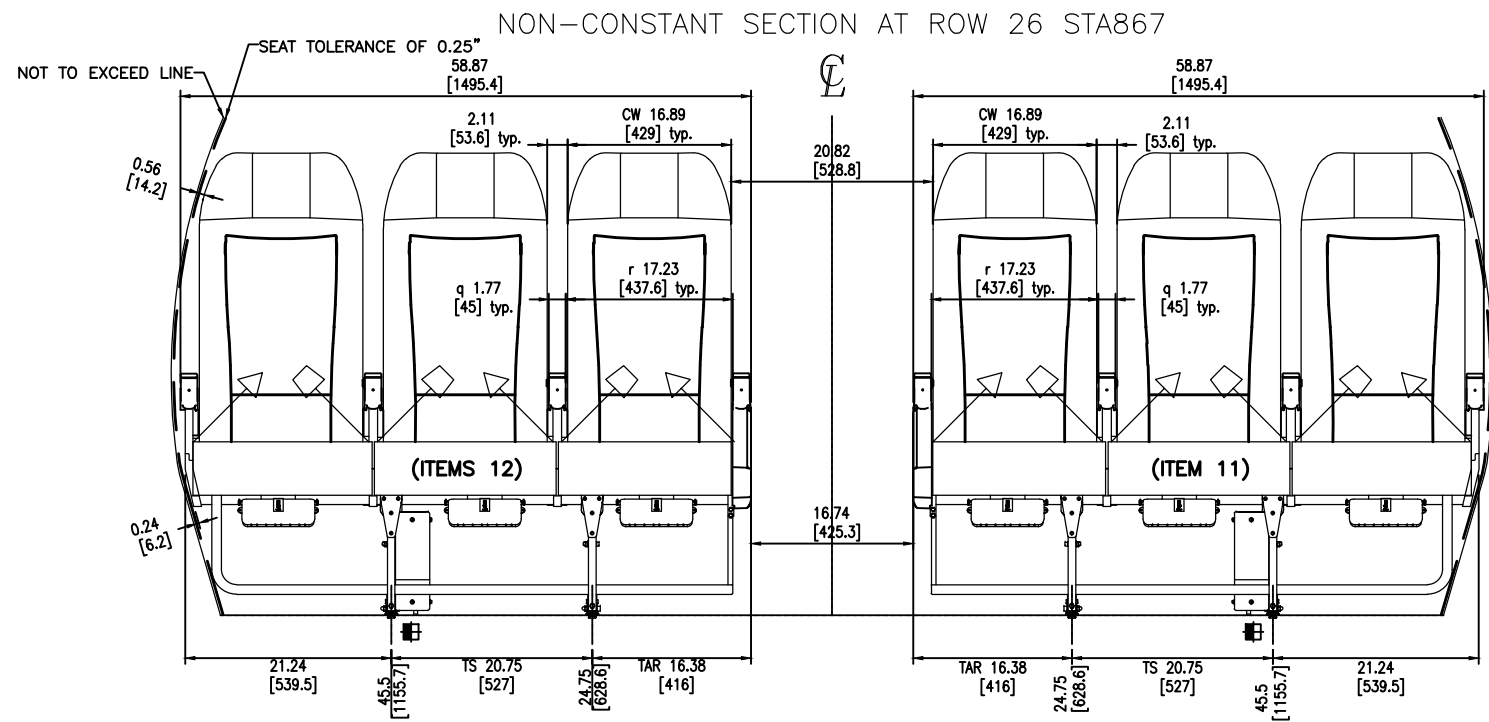
SYMBOL CODE:

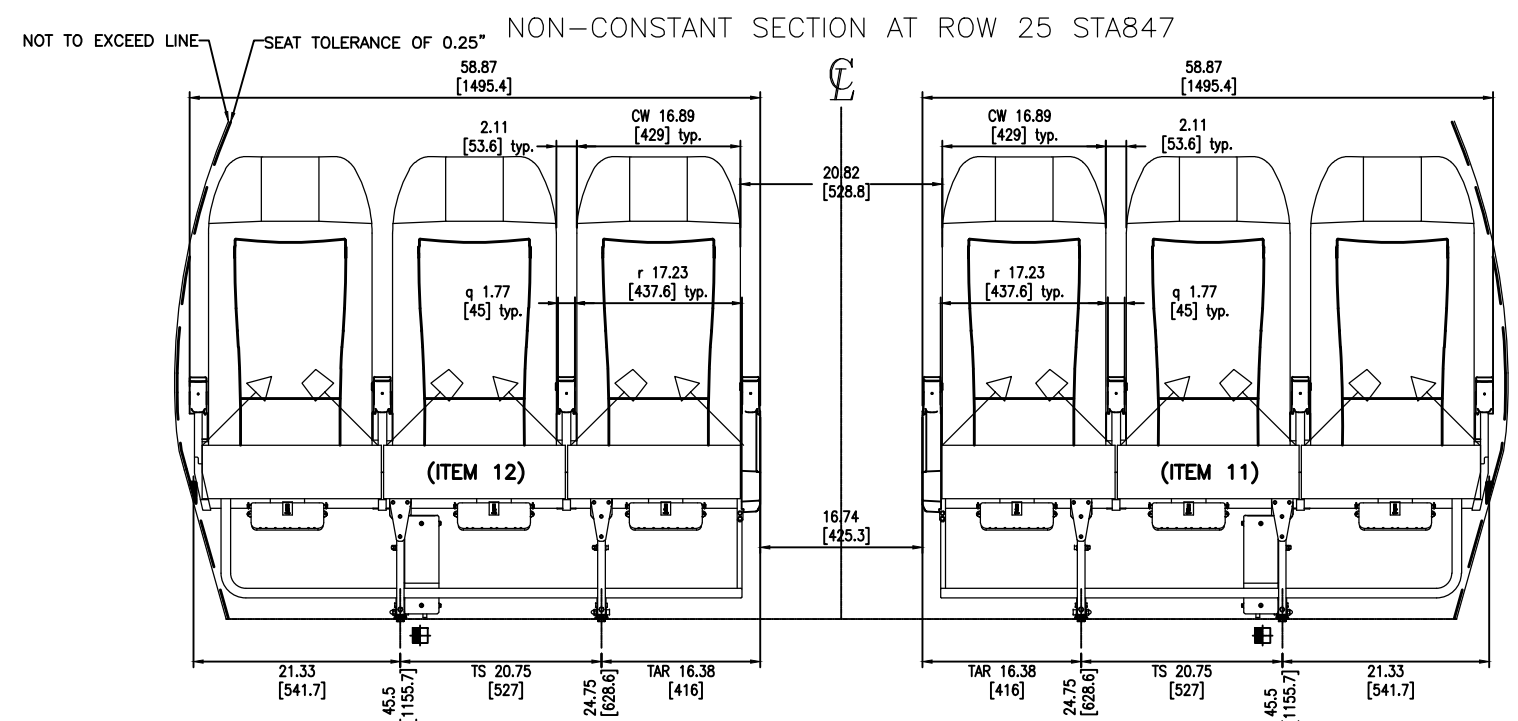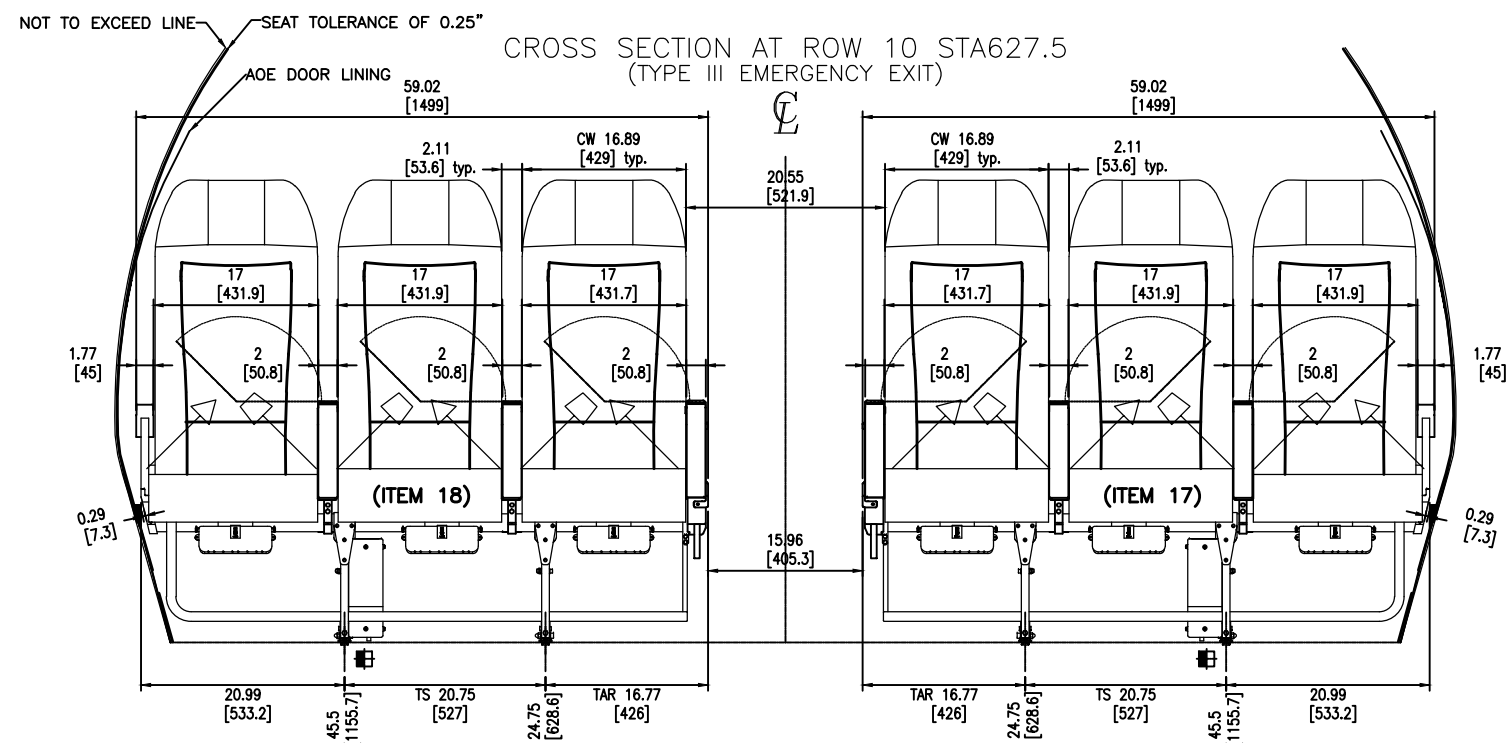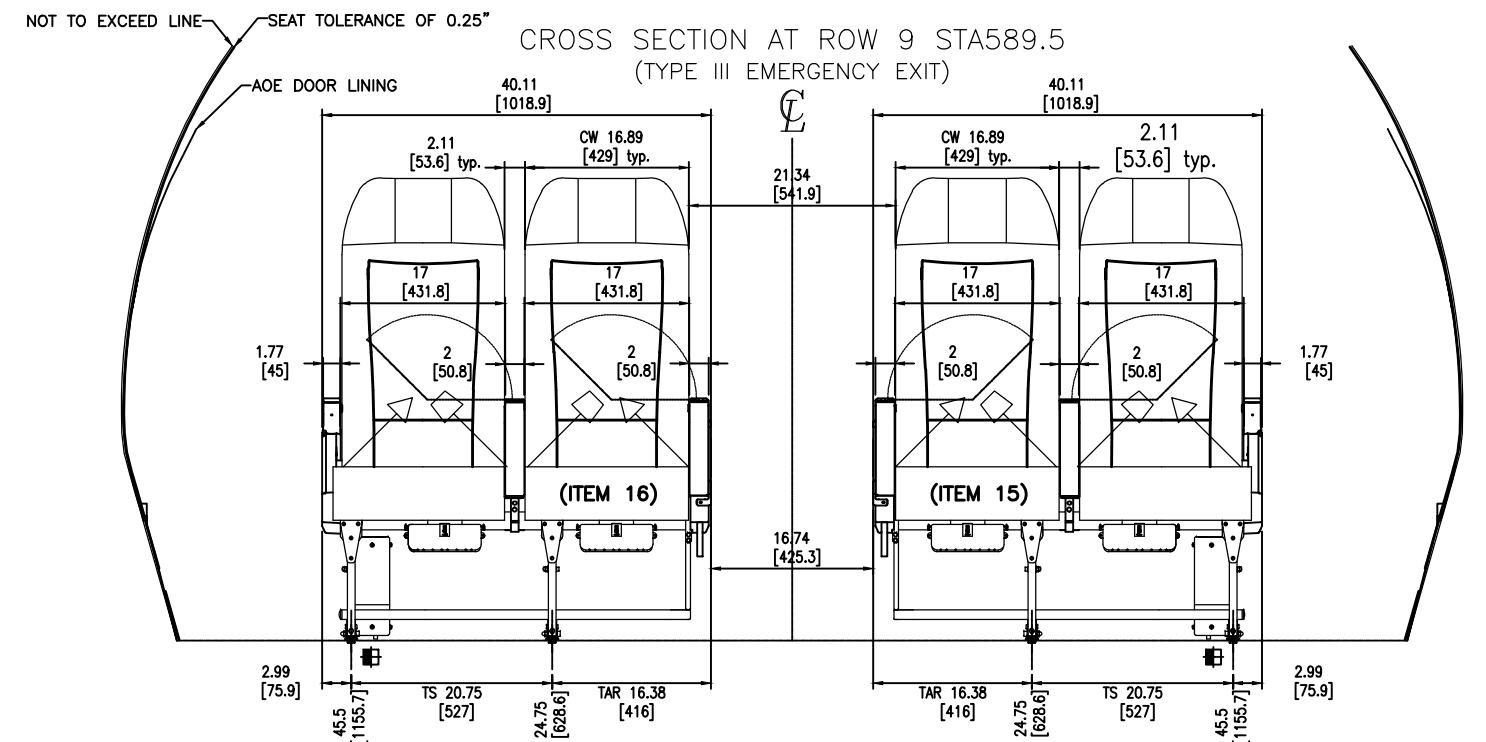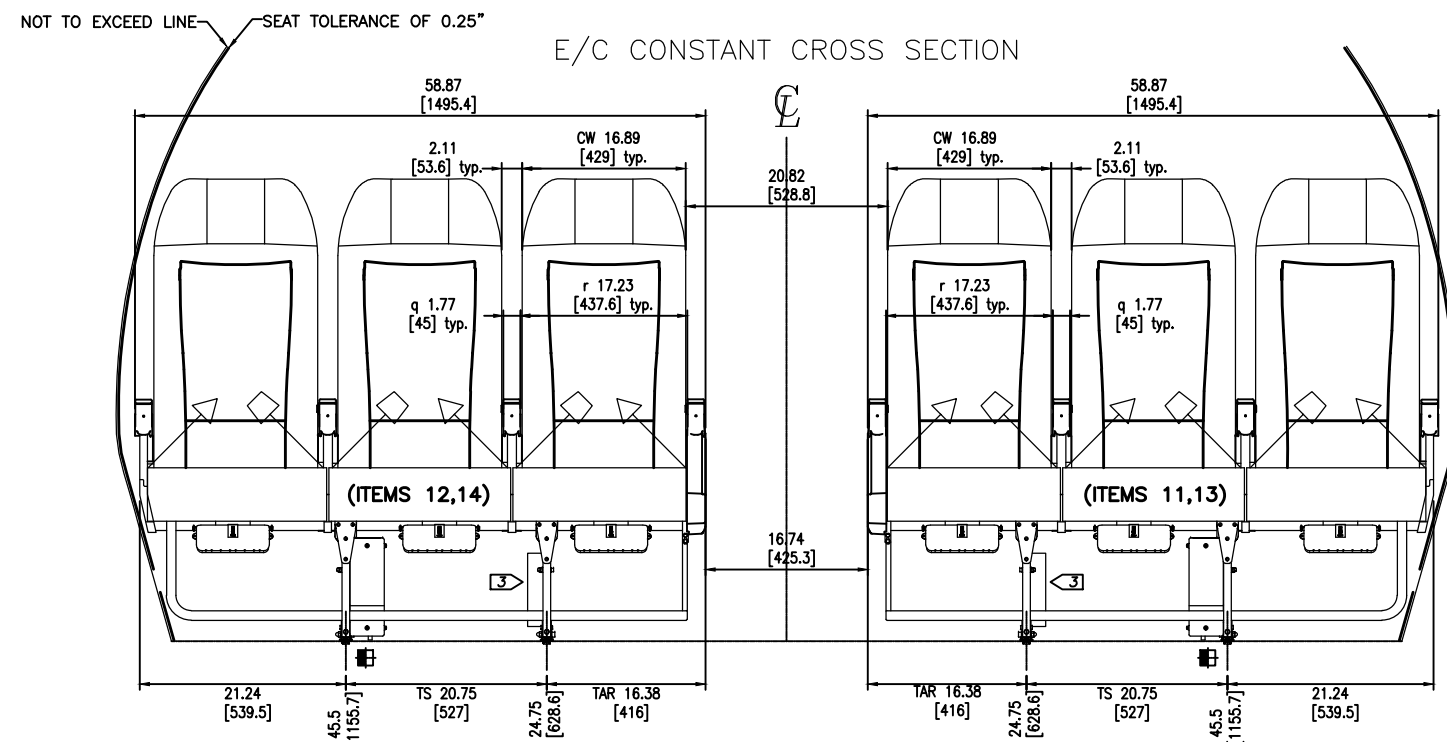-  DENOTES RACEWAY LOCATION  
 DENOTES BUCKLE LOCATION  
 DENOTES TIP LOCATION



SYMBOL CODE:

-  DENOTES RACEWAY LOCATION  
 DENOTES BUCKLE LOCATION  
 DENOTES TIP LOCATION



SYMBOL CODE:

- DENOTES RACEWAY LOCATION
- DENOTES BUCKLE LOCATION
- DENOTES TIP LOCATION