



ROKU[®]

 
Select Series

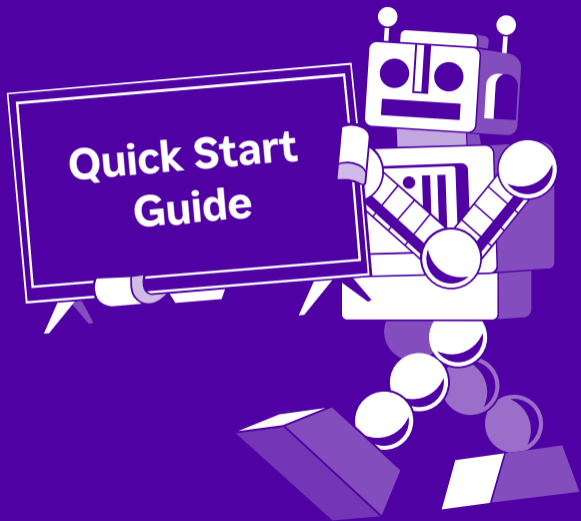


What's included

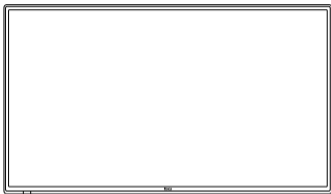

Roku Select Series TV



 TV power cord included for 50" - 75" models only



x 4 screws

Stand screws



TV stands

 


Roku TV Remote

What you need



Phillips head screwdriver




Laptop or mobile phone for activation



Internet connection

STEP 1: Set up your TV

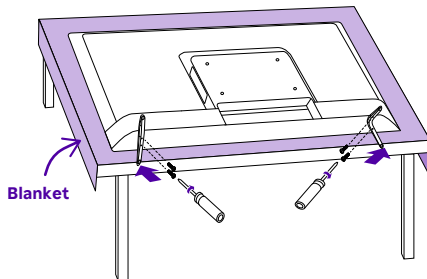

A Prepare a surface

Put a soft covering like a blanket down onto a clean, flat surface (make sure it's larger than the TV) and place the TV on it.

B Attach the stands


Use a screwdriver and included screws to attach the stands.

C Set TV upright


Place your TV on a stable, flat surface.

Mounting your TV?

For instructions, skip these steps and visit go.roku.com/TVmount

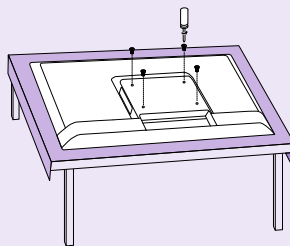

STEP 2: Plug TV in and power remote

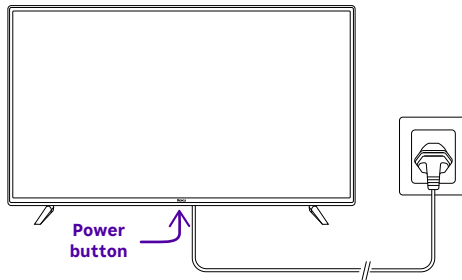

A Connect your TV


Plug your TV into a power outlet. It should turn on automatically. If it doesn't, press the power button.



B Power your remote

See the remote features card on how to use your Roku TV remote.

STEP 3: Activate your TV

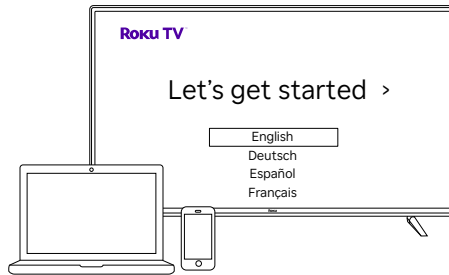

Connect your TV

Follow the instructions on your TV screen. Activate your TV by using your computer or smartphone to link a Roku account.



IMPORTANT

Roku never charges for activation support.

Frequently asked questions

Why do I need an internet connection?




You'll need an internet connection to set up your TV, stream your favourite channels, and for automatic software updates.

Why should I enter a payment method?




Saving a payment method makes it easy to rent or buy movies, subscribe to popular channels, and start free trials in just a click. No charges will be made without your authorization.

Get to know your TV



Video connections

-  **HDMI** - Game consoles, DVD players
-  **Composite (available on some models)** - Analog devices, older game consoles
-  **Antenna/Cable** - Digital antenna, cable connection

Audio connections

-  **HDMI ARC or eARC (recommended)** - AV receivers, soundbars
-  **Optical (S/PDIF)** - AV receivers, soundbars
-  **Headphone Jack (available on some models)** - Wired headphones

Other connections

-  **USB** - Flash drive for media playback
-  **Ethernet (available on some models)** - Wired internet connection



© 2026 Roku, Inc. All Rights Reserved. Roku, the Roku logo, and the purple d-pad and purple fabric tag designs are trademarks or registered trademarks of Roku, Inc.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Confidential unpublished works. Copyright 1992-2019 Dolby Laboratories. All rights reserved.

Need help?

For setup or support,
visit or call

go.roku.com/tv

+1 888-621-0891

8:00 am - 10:00 pm PT

