


6S Toolbox Lighting Remote

Install Instructions

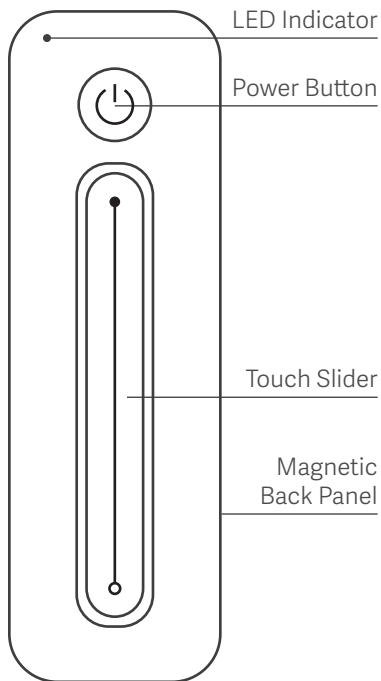

General Controls

Make sure to unscrew the Remote's battery compartment and remove the plastic tab. This remote has **three modes: Color (RGB), White (Dimming), and Pastel (RGBW).**

Double-press the Power button to cycle between modes.

Press and hold the power button or use the slider to perform different actions in each mode as shown below:

Color (RGB) Mode

Function:	Controls colored LEDs only, White LEDs are inactive
Short Press:	ON/OFF
Long Press:	1-6s to adjust brightness of Colored LEDs
Touch Slider:	Change RGB LED Color

White Mode

Function:	Controls high-brightness White LEDs, Colored LEDs inactive
Short Press:	ON/OFF
Long Press:	1-6s to adjust brightness of White LEDs
Touch Slider:	Change White LED Brightness

Pastel (RGBW) Mode

Function:	White and Colored LEDs will be active together
Short Press:	ON/OFF
Long Press:	1-6s to adjust brightness of Colored LEDs
Touch Slider:	Change RGBW LED Color

Mounting the Remote (3 Options)

Option 1:

- Mount the remote directly to a metal surface using the built-in magnets

Option 2:

- Screw the wall bracket onto a wall with two screws, then mount the remote to the wall bracket.

Option 3:

- Use the adhesive pad to adhere the wall bracket to a flat, clean surface, then mount the remote to the wall bracket.

Note: Before attempting to Pair the remote, remove the cover of the controller using a flat head screwdriver.

Pairing the Remote Control

Your remote control will already be paired with the controller, but in the event of an error or a replacement remote, follow the instructions below to pair a remote.

Match:

- Short press the Match button on the controller, then immediately press the ON/OFF button on the remote. The LED will flash three times if the match is successful.

Delete:

- Press and hold Match button for 5 seconds to delete all matched remotes. The LED will flash three times if the matched remotes were deleted.

Pairing Multiple Remotes or Controllers

Each remote can be paired to several LED Controllers, and likewise each LED Controller can be controlled by several remotes.

Match Multiple Remote to One LED Controller

- Short press the Match button on the controller, then immediately press the ON/OFF button on the remote. The LED will flash three times if the match is successful. Repeat for all remotes one at a time.

Match Multiple LED Controllers to One Remote

- Short press the Match button on the controller, then immediately press the ON/OFF button on the remote. Repeat on another controller using the same remote.

Vista reserves the right to modify this specification without prior notice.

Troubleshooting

The remote or endcap power buttons aren't working?

- Both the remote's power button and the built-in power button on the endcap of the light can turn the light bar on or off. To properly use the light bar, both the remote and the built-in power button must be switched ON.
- If the built-in power button is not working, try turning the light on with the remote by pressing its power button once to verify that power is flowing from the controller to the light bar before trying the built-in button again.
- If the remote button is not working, try pressing the built-in power button once and then trying the remote again. In addition to pressing the remote's ON/OFF button, make sure that the brightness of the light is turned up.

Double-pressing the power button isn't changing the mode?

- The power button must be pressed two times rapidly. If the light is only cycling off and back on when you double-press the power button, it simply is not being pressed quickly enough.

Another remote is controlling my lights, or my remote is controlling another light

- There may be interference or your remotes and LED controllers are paired to the wrong box. Confirm that you have the correct remote for your box, and if the issue persists follow the instructions for deleting all paired remotes by holding the Match Button on the LED controller for 5 seconds. Then follow the instructions to pair your remote again by pressing the Match Button once and then pressing the power button on your remote.

