

INSTRUCTION

ITEM# DTTDG402A



Parts:

1. Function keys
2. LCD display
3. Base
4. Measuring Rod
5. Battery compartment

Description:

- measuring range: 0-1"/0-25mm
- Reading: 0.0005" / 0.01mm / 1/32inch
- Accuracy: 0-1"/0.001"
- Battery: 3V CR2032 Lithium battery

Operation:

1. ON/0: Press button to turn the unit on, press it again to set zero*.
2. in/mm/F: Press in/mm button to switch readings among: inch, inch fraction (32nd), and mm.
3. HOLD: Press once to hold the reading; press again to release.



*Setting Zero

Press and hold the gauge on a flat surface and press NO/0 button to set zero.

INSTRUCTION

ITEM# DTTDG402A



Parts:

1. Function keys
2. LCD display
3. Base
4. Measuring Rod
5. Battery compartment

Description:

- Electronic indicator measuring range 0-1"
- Digital Depth gauge measuring range: 0-16"
- Reading: 0.0005" / 0.01mm / 1/128inch
- Accuracy: 0-1"/0.001"
- Battery: 3V CR2032 Lithium battery

Operation:

1. ON/0: Press button to turn the unit on, press it again to set zero*.
2. in/mm/F: Press in/mm button to switch readings among: inch, inch fraction (32nd), and mm.
3. HOLD: Press once to hold the reading; press again to release.



*Setting Zero

Press and hold the gauge on a flat surface and press NO/0 button to set zero.

INSTRUCTION

ITEM# DTTDG402A



Parts:

1. Function keys
2. LCD display
3. Base
4. Measuring Rod
5. Battery compartment

Description:

- Electronic indicator measuring range 0-1"
- Digital Depth gauge measuring range: 0-16"
- Reading: 0.0005" / 0.01mm / 1/128inch
- Accuracy: 0-1"/0.001"
- Battery: 3V CR2032 Lithium battery

Operation:

1. ON/0: Press button to turn the unit on, press it again to set zero*.
2. in/mm/F: Press in/mm button to switch readings among: inch, inch fraction (32nd), and mm.
3. HOLD: Press once to hold the reading; press again to release.



*Setting Zero

Press and hold the gauge on a flat surface and press NO/0 button to set zero.

**Parts:**

- | | |
|------------------------|------------------|
| 1. Function keys | 2. LCD display |
| 3. Base | 4. Measuring Rod |
| 5. Battery compartment | |

Description:

- Electronic indicator measuring range 0-1"
- Digital Depth gauge measuring range: 0-16"
- Reading: 0.0005" / 0.01mm / 1/128inch
- Accuracy: 0-1"/0.001"
- Battery: 3V CR2032 Lithium battery

Operation:

1. Press the Power button to turn the unit on or off
2. in/mm/F: Press in/mm button to switch readings among: inch, inch fraction, and mm.
3. Zero: Use one hand to hold the gauge down on a flat surface; use the other hand to press Zero button to set zero.
4. HOLD: Press once to hold the reading; press again to release.



* Setting Zero

**Parts:**

- | | |
|------------------------|------------------|
| 1. Function keys | 2. LCD display |
| 3. Base | 4. Measuring Rod |
| 5. Battery compartment | |

Description:

- Electronic indicator measuring range 0-1"
- Digital Depth gauge measuring range: 0-16"
- Reading: 0.0005" / 0.01mm / 1/128inch
- Accuracy: 0-1"/0.001"
- Battery: 3V CR2032 Lithium battery

Operation:

1. Press the Power button to turn the unit on or off
2. in/mm/F: Press in/mm button to switch readings among: inch, inch fraction, and mm.
3. Zero: Use one hand to hold the gauge down on a flat surface; use the other hand to press Zero button to set zero.
4. HOLD: Press once to hold the reading; press again to release.



* Setting Zero