

- Operating Instructions
- Warning Information
- Parts Breakdown



**MATCO
TOOLS**



! WARNING



- Always read instructions before using the Truck Tire Step.
- Vehicle Wheels must be wedged and brakes must be locked before using the Truck Tire Step.
- Never use the Truck Tire Step without adjustment pins locked into place by use of clevis pins. Check condition of entire unit before each usage. Check that the adjustment lock pins and clevis pins are securely in place.
- If using two Truck Tire Steps to make an extended platform, vehicle wheels must be wedged and brakes locked and both ends of platform must be securely bolted to each Truck Tire Step. Extension material must be of adequate size and strength to hold weight placed on it. It is also recommended you place a strong support box between the steps, under the extension, to add strength to the extended platform.
- Keep fingers and hands away from pinch point region of this tool at all times.

TS2125
Truck Tire Step

TS2925
**Heavy Duty
Truck Tire Step**

WARNING



It is the responsibility of the owner to make sure all personnel read this manual prior to using the device. It is also the responsibility of the device owner to keep this manual intact and in a convenient location for all to see and read. If the manual or product labels are lost or not legible, contact Matco Tools for replacements. If the operator is not fluent in English, the product and safety instructions shall be read and discussed with the operator in the operator's native language by the purchaser/owner or his designee, making sure that the operator comprehends its contents.



Vehicle Wheels must be wedged and brakes must be locked before using the Truck Tire Step.

Never use the Truck Tire Step without adjustment pins locked into place by use of clevis pins. Check condition of entire unit before each usage. Check that the adjustment lock pins and clevis pins are securely in place.

If using two Truck Tire Steps to make an extended platform, vehicle wheels must be wedged and brakes locked and both ends of platform must be securely bolted to each Truck Tire Step. Extension material must be of adequate size and strength to hold weight placed on it. It is also recommended you place a strong support box between the steps, under the extension, to add strength to the extended platform.



Keep fingers and hands away from pinch point region of this tool at all times.

 


WARNING: This product can expose you to chemicals including nickel, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

OPERATING INSTRUCTIONS


ADJUSTMENT TO FIT OVER TIRE:

While step is still folded and placed on the ground, remove Pin (#6), slide Back Arm to proper adjustment, re-insert Pin (#6) in same direction as removed, lock pin with clevis pin (#8).

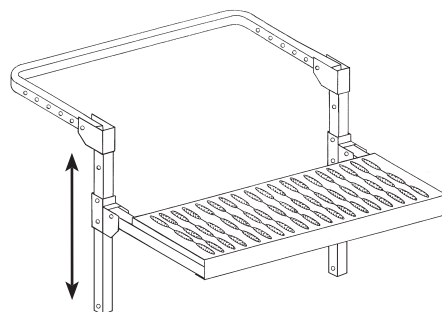

TO ADJUST VERTICALLY IN HEIGHT:

 While step is still folded and placed on the ground, remove Pin (#7), adjust step to height desired, re-insert Pin (#7) in same direction as removed, lock pin with clevis pin (#8).

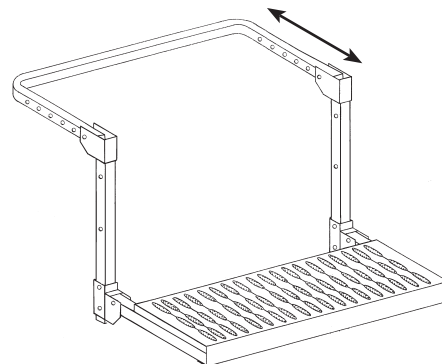


MECHANICS





HOME USE



 SPORTING GOODS

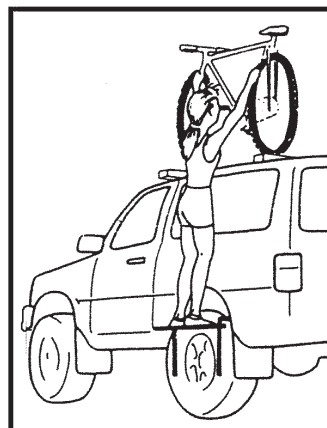


DIESEL TRUCK

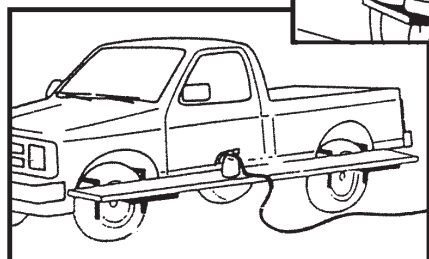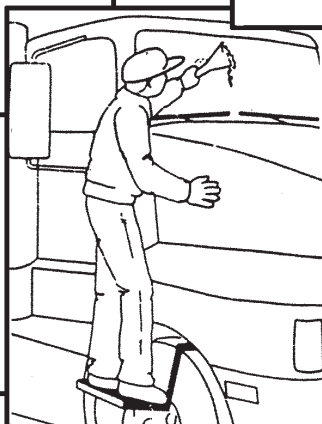  

AUTO BODY AND PAINT



 LUGGAGE RACK

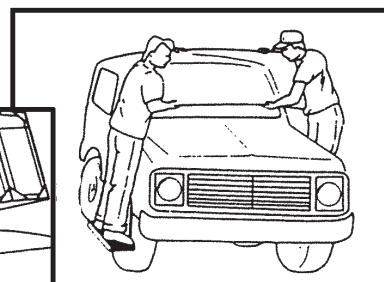


GLASS REPAIR



**MATCO
TOOLS**

TS2125 Truck Tire Step

 TS2925 Heavy Duty Truck Tire Step

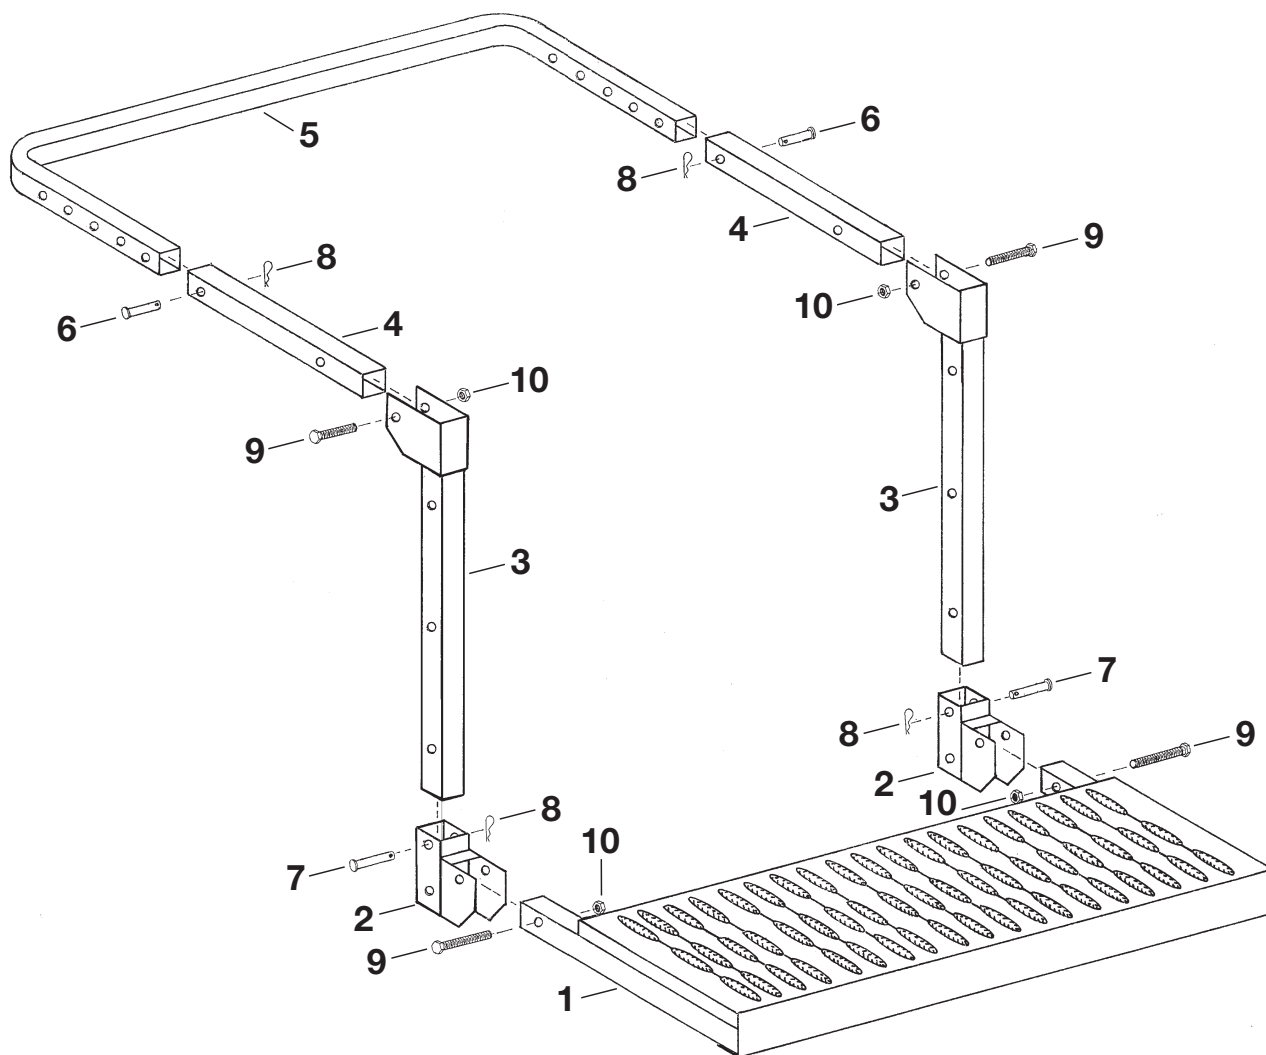

REF. NO.	DESCRIPTION	QTY.
1	Step	1
2	Connector	2
3	Adjusting Tube	2
4	Slide Tube	2
5	Adjusting Tube	1
6	Pin 5/16, 1-1/4"L	2
7	Pin 5/16, 1-1/2"L	2
8	Clevis Pin 1-1/6 diameter	4
9	Bolt M8-1.25 40mm	4
10	Nut M8-1.25 Nylon Lock Nut	4

Warranty

Matco warrants Truck Tire Steps for a period of 1 year from original purchase against defects in material or workmanship. We will repair or replace at our option any defective part or unit which proves to be defective in material or workmanship within this warranty plan. This warranty does not cover damage to equipment or tools arising from alteration, abuse or misuse, and does not cover any repairs or replacement made by anyone other than Matco or its authorized service centers.

This warranty does not apply to normal wear and tear, nor does it cover any damage caused by careless or unsafe handling, alterations, accidents, misuse, or repair attempts by anyone other than an authorized warranty center.

This warranty gives you specific rights. You may also have other rights which vary from state to state.

The foregoing obligation is Matco's sole liability under this or any implied warranty and under no circumstances shall Matco be liable for any incidental or consequential damages.

Note: Some states do not allow the exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

Return equipment or parts to Matco Tools, or an authorized service center, transportation prepaid. Be certain to include your name and address, evidence of the purchase date, and description of the suspected defect.

If you have any questions about warranty service, please write to Matco Tools, Stow, OH 44224. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.