

LEDLGHT46V - HUTCH LIGHT 46" LED



Vista Mfg., Inc.
53345 Columbia Dr
Elkhart, IN 46514

Hutch Light Kit Service Parts Diagram LEDLGHT46V



Description		Part Number
Hutch Light Service Parts		LEDLGHT46V
A	Power Supply	LEDLGHTPWR
B	Prox Sensor Kit	LEDLGHTPROXH
C	Magnetic Mount	LEDLGHTMGNT
D	Wire Duct - 17.5"	LEDLGHTDUCT

Item: LEDLGHT46V

Description: HUTCH LIGHT 46" LED

Notes: In the majority of cases, the entire lighting kit does not need to be replaced. Please follow the following diagnostic procedures: 1. Using a functional wall outlet, plug the 36V power supply directly into the light bar. This will help determine three potential issues: - If the light turns on, the issue is likely with the prox switch. - If the light does not turn on, the power supply may be faulty. Test with another functioning power supply. - If the light bar remains off, the light bar itself may be defective. Test the power supply with a working light to confirm. 2. If the light turns on and you suspect the prox switch is the problem, follow these steps: - Check the mounting location of the prox switch. These switches are attached to the box with magnets and can be easily knocked out of position. - Adjust the position of the prox switch according to the mounting instructions in the kit. If the switch still does not trigger the light, the switch may be faulty. Most non-functioning light issues are due to the prox switch being bumped out of position. These switches are very sensitive, and minor adjustments can often resolve the customer's problem. For additional warranty support please contact Vista Mfg directly at the e-mail or phone number below: Email Address: sales@vistamfg.com Phone Number: (574) 264-0711

Figure No	Part Number	Description	No. Reqd	Warranty Code
1	LEDLGHTPWR	LIGHT POWER SUPPLY	1	G
2	LEDLGHTPROXH	HUTCH LIGHT PROX SENSOR	1	G
3	LEDLGHTMGNT	LIGHT MAGNETIC MOUNT	1	G
4	LEDLGHTDUCT	LIGHT WIRE DUCT 17.5"	2	G