





 
## Full of Flavor Ice Cream Truck

С	on	tai	ns	

	truck	3 triple scoops	
ŀ	gallon containers of ice cream with lids	2 cone holders	
ŀ	pints with lids	1 ice cream scooper	
	Jeni's box	1 set of 4 ice cream signs	
ŀ	waffle cones	1 phone	
5	waffle bowls	1 phone case with card reader	
5	bowls	1 reversible phone screen	
5	spoons	1 gift card	
ŀ	double scoops	5 \$1 bills	


	Adult assembly required. Tool required for battery installation: Phillip Requires 3 AA (LR6) x 1.5V alkaline batteri Dispose of batteries safely. Keep these instructions for future refer important information. American Girl and associated trademarks ar or future reference: American Girl, 2330 Eag	es (not included). ence as they contain e owned by American Girl,
HMF25-0970 1101575114-DOM	<b>?</b> americangirl.com/service	6+

## BATTERY INSTALLATION







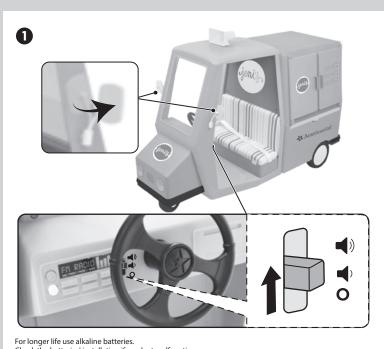

For longer life use alkaline batteries. Check the batteries' installation if product malfunctions. When exposed to an electrostatic source, the product may malfunction. Turn the switch off and then power on again. HINT: When light dims or sounds from this toy become faint or stop, it's time for an adult to change the batteries. Note: The product is equipped with an automatic shut-off feature that helps preserve battery life.

