

Knife Sharpener

(70M46.50)


The following instructions were provided by the manufacturer.

Directions:


Place the handle on a flat surface with the sharpening side facing up. Allow the working end to overhang the edge. Holding the knife blade perpendicular to the sharpener handle, draw the knife blade through the sharpening cutters 3 to 4 times with light pressure, raising the handle slightly as you come to the curved part of the blade. Very dull knives may require more passes. Always use light pressure; excessive force can chip the carbide cutters.

A right-handed person normally holds the sharpener handle in the left hand, drawing the knife through the cutters with the right hand. A left-handed person does the opposite. The sharpener is shipped ready for right-handed use, but the cutters can be flipped over for left-handed use.

Using light pressure, draw knife through sharpening cutters.

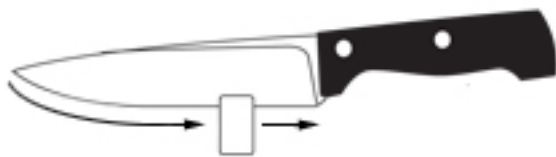

Raise handle slightly to sharpen curve.

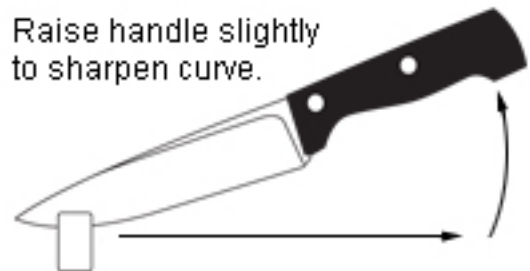


Rotating the Cutters:

If an edge of the four-sided carbide cutter is accidentally damaged, remove the fixing screw and rotate the cutter to present a new edge.

Flipping the Cutters for Left-hand Use:

Starting on either side of the handle, remove the fixing screw, flip the carbide cutter over and screw it back in. Repeat this on opposite side.

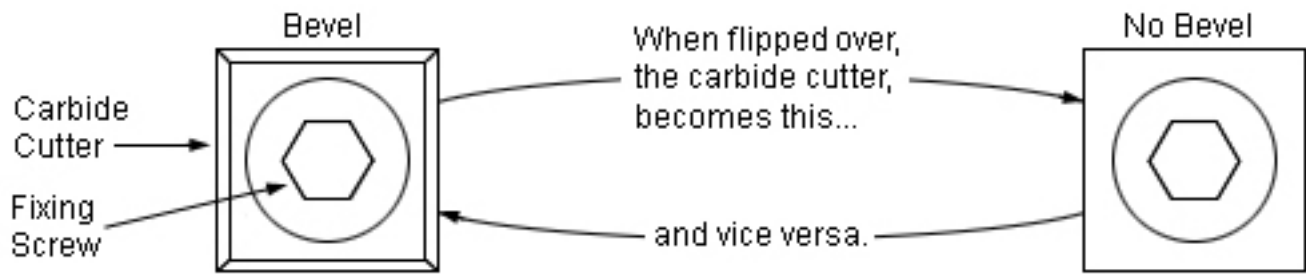

Do not use with serrated blades, scissors or heavy chopping knives. Excessive pressure or large, heavy knives can damage the carbide cutters.
