
PARTS BREAKDOWN

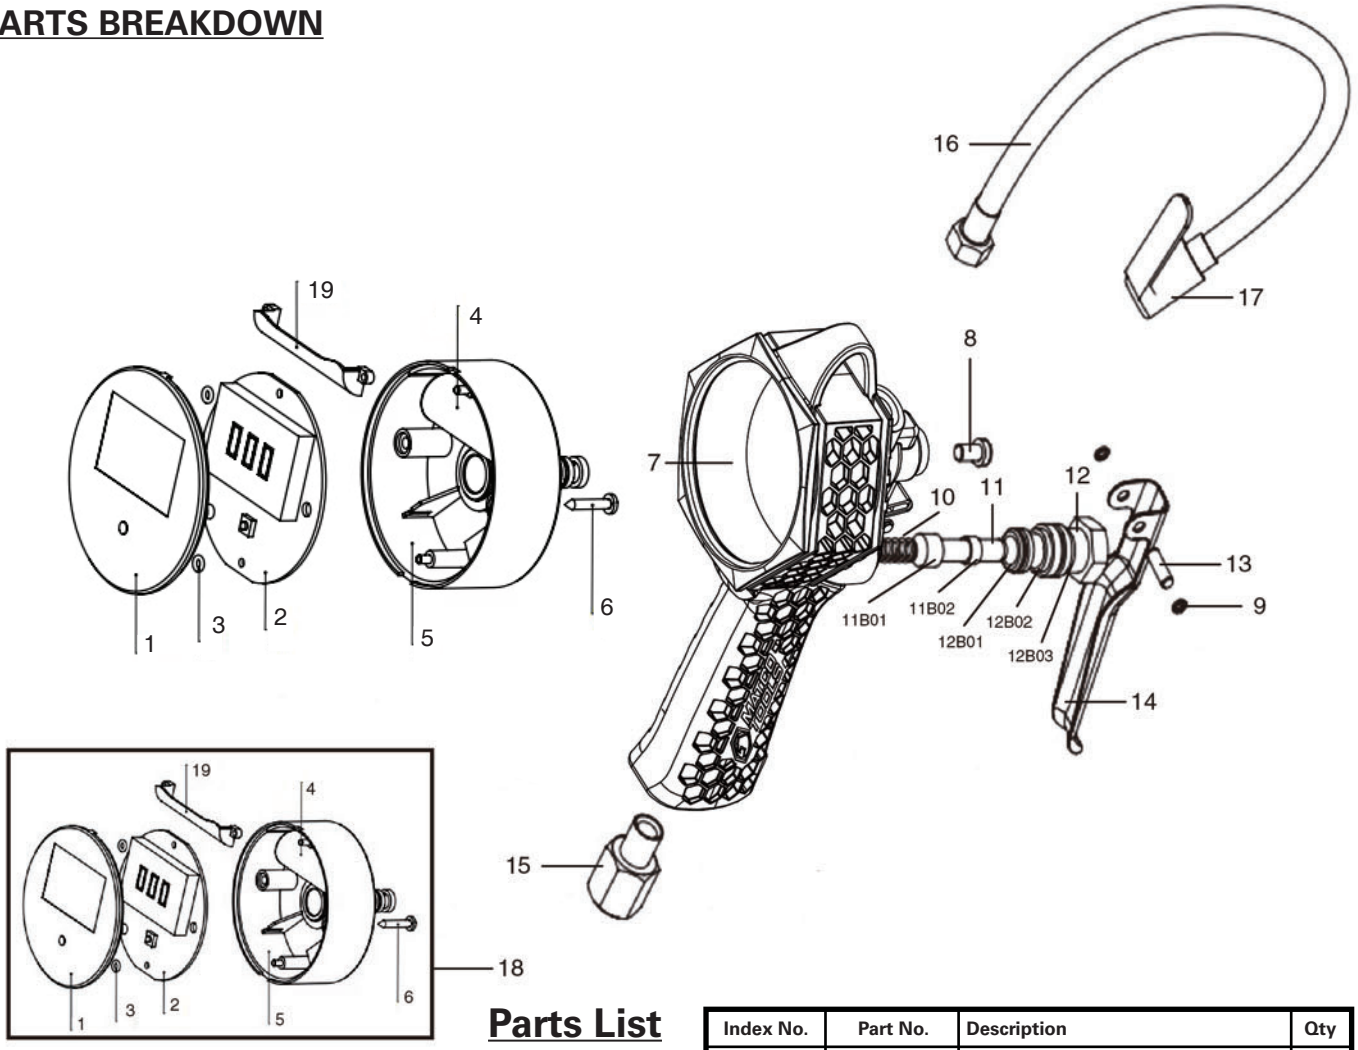

Parts List

Index No.	Part No.	Description	Qty
1	DT9-01	Front Cover	1
2	DT9-02*	PCB Board Assembly	1
3	3018-03	Ø 2.6 x 6.0 Screw	2
4			2
5	DT9-05	High Accuracy Sensor Assy.	1
6	3018-06	Ø 3.5 x 14 Screw	2
7	DT9G-07	Main Body - Green	1
	DT9M-07	Main Body - Orange	1
	DT9B-07	Main Body - Blue	1
	DT9P-07	Main Body - Purple	1
8	3018-08	Hex Screw Ø 3.5 x 8	1
9	3018-09	Circlip Ø 3.5	2
10	3018-10	Spring 0.85 x 7.0 / 8.0 x 18.5 x 7	1
11	3018-11	Valve Assembly	1
11B01	3018-11B01	O-Ring	1
11B02	3018-11B02	O-Ring	1
12	3018-12	Valve Base Assembly	1
12B01	3018-12B01	O-Ring	1

Index No.	Part No.	Description	Qty
12B02	3018-12B02	O-Ring	1
12B03	3018-12B03	O-Ring	1
13	3018-13	Lever Pin	1
14	3018-14	Lever	1
15	3018-15	Air Inlet	1
16	DT9G-16	Green Hose Assembly with Bend Protect Spring and Without Chuck	1
	DT9M-16	Orange Hose Assembly with Bend Protect Spring and Without Chuck	1
	DT9B-16	Blue Hose Assembly with Bend Protect Spring and Without Chuck	1
	DT9P-16	Purple Hose Assembly with Bend Protect Spring and Without Chuck	1
17	3018-17	Air Chuck	1
	3018GR-17	Coupler Style Chuck	1
18	DT9G-18	Digital Gauge Assembly - Green	1
	DT9M-18	Digital Gauge Assembly - Orange	1
	DT9B-18	Digital Gauge Assembly - Blue	1
	DT9P-18	Digital Gauge Assembly - Purple	1
19	3018-19	Battery Cover	
	DT4-VSA	Air Valve Rebuild Kit (includes part numbers 11, 11B01, 11B02, 12, 12B01, 12B02, and 12B03.)	

Items marked with an (*) are not sold individually