MST5907

EXTRACTOR DE JUNTA UNIVERSAL INTERMEDIO

INTERMEDIATE U-JOINT PULLER



WARNING:

Read all instructions and warnings before using this product. Failure to do so can lead to damage to the tool, personal injury, or possibly death.


WARNINGS:

- DO NOT USE WITH AN IMPACT WRENCH LARGER THAN 1/2" DRIVE. Doing so will void the product warranty immediately.
- Hammering on this tool will void the product warranty.
- Always be aware of your surroundings when using this tool.
- Always be sure to inspect the tool for damage or signs of stress before each use.
- Only use when you have equipped yourself with proper safety gear. This pertains to the user and others in the same area of operation.
- Be sure to keep any loose items away from the tool during use, including but not limited to jewelry and clothing.
- Do not use this tool confined or unclean areas.
- Keep tool lubricated, especially where the force screw rotates in the puller cup. Recommended lubricants are SAE 30 and EP moly grease.

MST5907

INSTRUCTIONS:

1. Remove bearing cup bolts and bolt keepers
2. Adjust the puller cup to allow it to accept the yoke.
3. Turn the center screw assembly until the is against the yoke (reverse thread).
4. Use a ratchet or either 3/8" or 1/2" (no larger) impact wrench release the bearing cup.
5. Once the first bearing cup has been fully extracted, rotate the driveshaft and repeat steps 2 through 4.

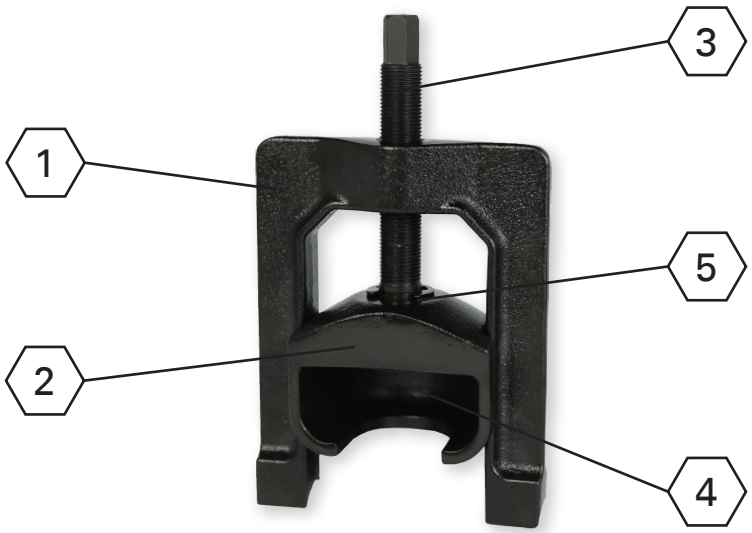

Item	Part Number	Description
1	907-1	Puller Frame
2	907-2	Puller Cup
3	907-3	Center Screw Assembly
4	907-4	Cup Plug
5	N/A	Retainer Ring