

Monkey Hook®

(00F14.49+)


The following instructions were provided by the manufacturer.

Monkey Hook products are designed exclusively for use on 1/2" and 5/8" drywall (also known as sheetrock or wallboard) where no stud exists, and designed for loads which hang down directly from bottom of 'cradle' (see illustration). Stated maximum load ratings are shown for guidance only; The Monkey Hook, LLC does not warrant any actual load capacity due to variables outside of our control, such as installation angle, type, thickness and condition of drywall, size of hole made during installation, etc.

1. Mark insertion point on wall 1/4" (.65cm) above desired spot.



2. Grip hook (Fig.1); press EZ Self-Boring 'Tip' perpendicular to wall at insertion point, then twist back & forth while pushing steadily until 'Tip' penetrates through wall. (Fig. 2)

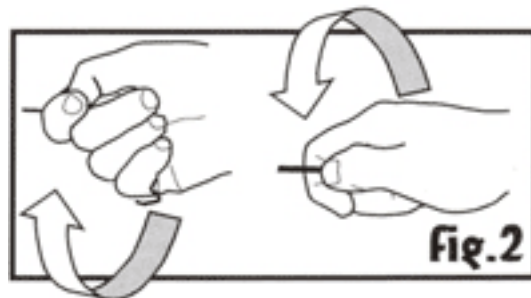

3. Align as shown (Fig.3A) and slide shaft fully through hole until only the cradle is exposed (Fig. 3B). You may feel Self-Locking feature engage.

