

Safety Information

Read and follow the instructions as set out in this manual.

Caution!



Warning

Failure to follow instructions as set out in this manual may result in personal injury.



Wear Eye Protection


Adaptor Application

Part No	Description	
20107	Adaptor - M22 x 1.5mm	VW/Audi with CVT Transmission
20108	Adaptor - M24 x 1.5mm	VW/Audi with DSG Transmission
20109	Adaptor - M18 x 1.5mm with flex hose	Toyota ATF
20110	Adaptor - 5/16 – 24 UNF x 46mm	Volvo ATF
20111	Adaptor - M10 x 1.0mm x 95mm	VW ATF
20112	Adaptor - M12 x 1.5mm x 83mm	Mercedes Benz with 722.9 7 G Tronic Transmission
20113	Adaptor - 45° x 142mm	General
20114	Adaptor – 1/8" NPT x 118mm	Ford ATF
20115	Adaptor – M8 x 1.0mm x 46mm	VW Tiguan
20116	Adaptor – M30 x 1.5mm	VW
20120	Pressure Hose – 1m	All


Operation - Refill Transmission

Note: Refer to manufacturers repair manual for correct service procedure.


- 1.1** Remove transmission refill plug.

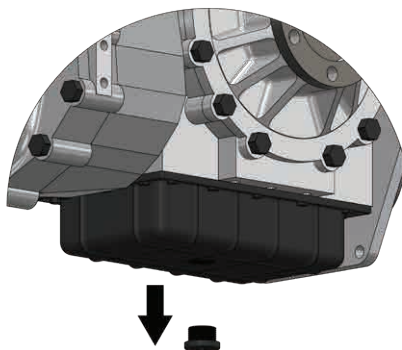

- 1.2** Select and install required refill adaptor.

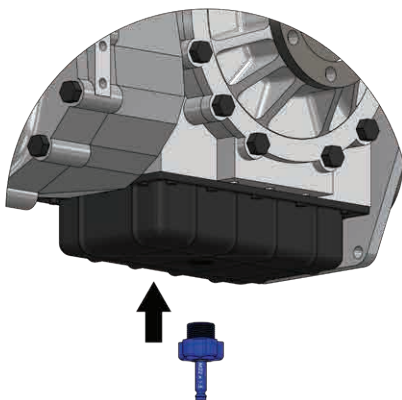

- 1.3** Connect drill pump hose.

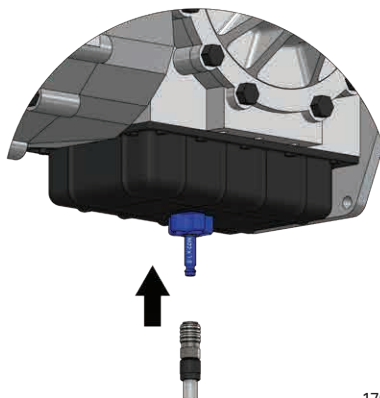


1.4

Place suction hose into ATF fluid. Operate drill pump to fill transmission.



Spare Parts

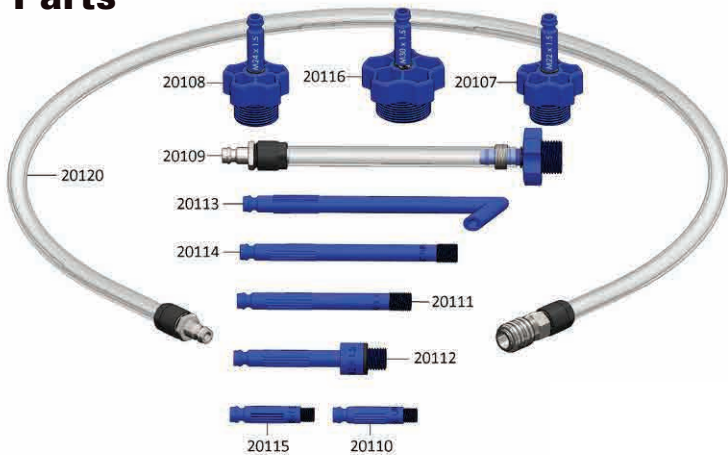

Item No.	Part No	Description	QTY
1	20107	M22 x 1.5mm Adaptor	1
2	20108	M24 x 1.5mm Adaptor	1
3	20109	M18 x 1.5 Flex Hose Adaptor	1
4	20110	1/16" - 24UNF x 46mm Adaptor	1
5	20111	M10 x 1.0mm x 95mm Adaptor	1
6	20112	M12 x 1.5mm x 83mm Adaptor	1
7	20113	45° x 142mm Adaptor	1
8	20114	1/8" NPT x 18mm Adaptor	1
9	20115	M8 x 1.0mm x 46mm Adaptor	1
10	20116	M30 x 1.5mm Adaptor	1
11	20120	Pressure Hose Assembly	1

Información de seguridad

Lea y siga las instrucciones descritas en este manual.

Precaución!



Advertencia

El incumplimiento de las instrucciones descritas en este manual puede provocar lesiones personales.



Use protección para los ojos

Aplicación del adaptador


Parte No	Descripción	
20107	Adaptador - M22 x 1.5mm	VW / Audi con transmisión CVT
20108	Adaptador - M24 x 1.5mm	VW / Audi con transmisión DSG
20109	Adaptador - M18 x 1.5mm con manguera flexible	Toyota ATF
20110	Adaptador - 5/16 - 24 UNF x 46mm	Volvo ATF
20111	Adaptador - M10 x 1.0mm x 95mm	VW ATF
20112	Adaptador - M12 x 1.5mm x 83mm	Mercedes Benz con transmisión 722.9 7 G Tronic
20113	Adaptador - 45° x 142mm	General
20114	Adaptador - 1/8" NPT x 118mm	Ford ATF
20115	Adaptador - M8 x 1.0mm x 46mm	VW Tiguan
20116	Adaptador - M30 x 1.5mm	VW
20120	Manguera de presión - 1m	Todas




Operación - Transmisión de relleno

Nota: Consulte el manual de reparación del fabricante para el procedimiento de servicio correcto.


- 1.1** Retire el tapón de relleno de la transmisión.

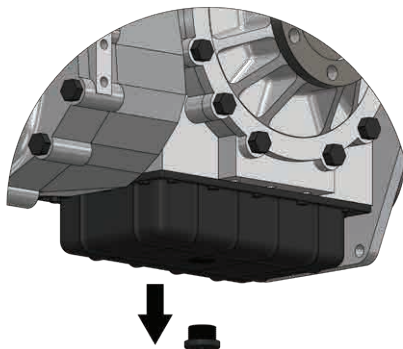

- 1.2** Seleccione e instale el adaptador de recarga necesario.

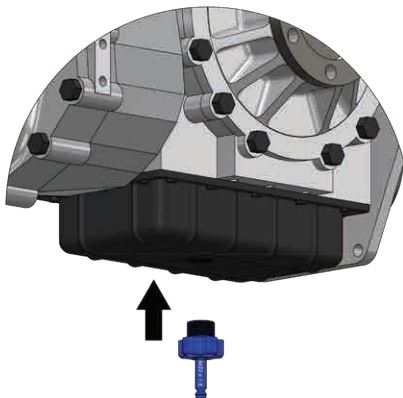


- 1.3** Conecte la manguera de la bomba de taladrado.

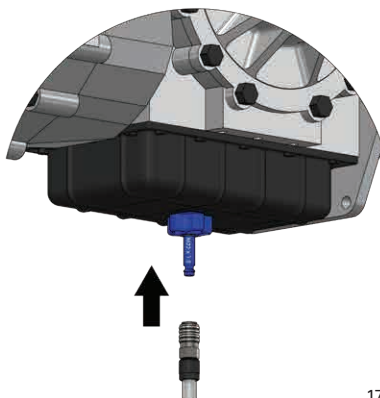

- 1.4** Coloque la manguera de succión en el líquido ATF. Operar la bomba de taladro para llenar la transmisión.



Piezas de repuesto

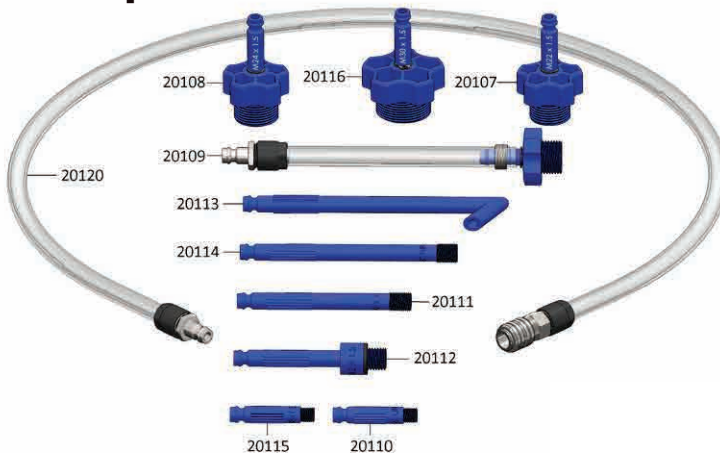

Artículo N°	Referencia	Descripción	Cantidad
1	20107	M22 x 1.5mm Adaptador	1
2	20108	Adaptador M24 x 1.5mm	1
3	20109	Adaptador de manguera flexible M18 x 1.5	1
4	20110	1/16" - 24UNF x 46mm Adaptador	1
5	20111	M10 x 1.0mm x 95mm Adaptador	1
6	20112	M12 x 1.5mm x 83mm Adaptador	1
7	20113	45° x 142mm Adaptador	1
8	20114	1/8" NPT x 18mm Adaptador	1
9	20115	M8 x 1.0mm x 46mm Adaptador	1
10	20116	M30 x 1.5mm Adaptador	1
11	20120	Unidad de manguera de presión	1



PK71196ADPT

Made in Taiwan
to Matco specifications

Matco Tools
Stow, OH 44224

www.matcotools.com