


Slim Stylus Pen Hardware Kit

Requires standard A mandrel, slim ballpoint pen/pencil bushings (88K78.70), 7 mm or letter J drill bit, and minimum 1/2" square blank.

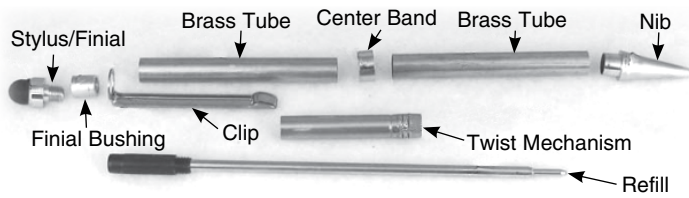


Parts photograph for slim stylus pen.

Preparing the Material Blanks

1. Cut the material blanks a little longer, approximately 1/4", than the pen tubes. It is worth noting that the pen tubes are longer than the 7 mm pencil tubes. They are **not** interchangeable.
2. Drill each blank through the center, lengthwise, with a 7 mm bit.
3. Polish the brass tubes with sandpaper. This can be done by hand or on a power machine such as a belt sander. The purpose of the sanding is to clean off the oxidation and roughen the tube so that the glue will have a better adhesion surface.
4. Plug the ends of the tubes with the material of your choice. Some use base wax (a dental product), or play dough, or even a slice of potato. Just push the ends of the tubes into a thin section of the material. This will form a plug to keep the glue from getting into the tube.
5. Clean the tubes, after plugging, with acetone or alcohol on a rag.
6. Prepare your glue. You can use a fast-drying, two-part epoxy, one hour or less. Be sure to mix it thoroughly. (A Post-it® Note pad makes an excellent mixing place. When you are finished just tear it off and throw it away.) Polyurethanes and thick flexible cyanoacrylates (CAs) can also be used. (If not using epoxy, go to step 9.)
7. Place some epoxy into the blank using a small piece of dowel or other small stick.
8. Roll the appropriate tube in the epoxy.
9. Insert the tube with a twisting motion until it is almost all the way into the material blank. Then use the dowel to push it in until the end is flush with the blank. Use the dowel to rake off the excess glue even with the blank and the tube.
10. Push the brass tube through the blank until the other end is flush with the blank. Then rake the glue flush with that end. Now push the tube back into the blank until the tube ends are equidistant from the ends of the blank.
11. Set it aside for 60 minutes until the epoxy has had time to reach its maximum strength.
12. If you are using CA glue, the wait is only about 60 seconds. When using polyurethane the wait will be about 24 hours.

13. When the glue has cured, use a hobby knife to remove the plugs from the ends. It is also a good idea to clean the tubes with a brass gun-cleaning brush or a rolled up piece of sandpaper to remove any glue that may have gotten into the tubes.
14. Not cleaning out all glue from the tubes is the most common cause of pen failure. **Be certain** that all dried glue is removed from inside the tubes before proceeding.
15. Using a barrel trimmer of the proper size, face off each end of the blank until it just touches the brass end of the tube. **Stop** facing at this point. Your pen's proper operation is dependent on having the proper length tubes. This facing operation can also be done with the proper jig and a disc or belt sander.
16. Not having the proper tube length is the #2 cause of pen failure. Sanding, on a disc sander, using a jig to hold the tube square with the disc, is a more sure way of getting the proper length. It should be tried if you have any doubt as to your abilities to square the material with the barrel trimmer.
17. Another good method of squaring the ends of the blank is to turn the blank until it is just round. Using a miter gauge to maintain the blank perpendicular to the sanding disc, just touch the ends to the disc. Once the blanks are square and you can see the ends of the tubes brighten, then return the blanks to the mandrel and finish the turning until the desired contour is accomplished.

Turning the Blanks

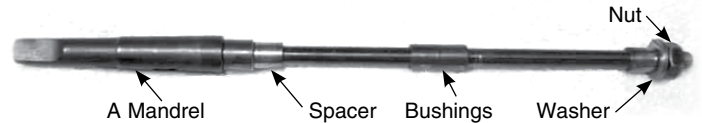

1. Assemble the blanks on the mandrel using the bushings. With these bushings it is not necessary to be particular with the order they go on the mandrel. They are all identical.
2. Tighten the tailstock before tightening the blanks on the mandrel. This will center the mandrel first. Then tighten the nut that holds the blanks.
3. Turn the blanks to the desired contour, making sure that the blank diameters are the same as the bushings.
4. After turning the blanks, sand the surface in progressive steps until you get to 400 or 500 grit.
5. Remove the blanks from the mandrel.

Assembling the Pen

Please refer to the pen parts photograph.

The third most common error resulting in a non-functional or damaged pen is the misalignment of the parts when pressing them in place. The use of a good pen press or small arbor press is recommended, but it can be accomplished with a good C-clamp and much care. When pressing in the various parts, by any means, **be sure** that the parts are straight and in line with the blanks. If the part is cocked or otherwise misaligned, at the very least, a poor fitting pen will result. At the worst, you may have a pen that is not usable. Exercise caution here!

Occasionally, you will encounter parts that are a little loose fitting. This can be corrected by using a **small** spot of glue, usually CA, on these parts before pressing them home.

1. Press the nib into one end of one of the finished blanks.
2. Press the twist mechanism into the other end of the same blank. Press this in up to the indentation on the mechanism. It is wise to stop just a little short of the indentation and then test the pen by inserting the refill and extending the point. The point should extend about 1/8". Adjust the mechanism accordingly. Make sure you do not go too far. If you do, the pen point will not retract fully, leaving the tip exposed to ruin a shirt or jacket.
3. Press the finial bushing into place on one end of the other blank.
4. Place the clip onto the top of the finial bushing.
5. Screw the finial/stylus tip through the hole in the clip into the finial bushing.
6. Slip the center band over the twist mechanism.
7. Slide the cap onto the pen. This is sometimes a little tight. Rubbing some paraffin wax on the mechanism nubs will help the cap to slide on easier.

This pen uses a standard Cross-style refill. To change the refill, remove upper pen section, unscrew the used refill and replace with new one. Slide the upper pen section back onto the pen.

Twist the upper pen section clockwise to expose the pen nib, and counterclockwise to retract it.